

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com



M65

| | | | |
|---|----|-----------------------------------|----|
| Safety precautions | 2 | MMS | 31 |
| Overview of the phone | 4 | E-mail | 35 |
| Display symbols | 6 | Voice message/CB | 36 |
| Getting started | 7 | Surf & fun | 37 |
| Switching phone on and off/ entering PIN | 10 | Setup | 40 |
| General instructions | 11 | Fast access | 50 |
| Standard functions | 13 | Organiser | 51 |
| Security | 14 | Extras | 53 |
| Text entry | 16 | My stuff | 55 |
| Calling | 18 | Customer Care | 56 |
| Default book | 20 | Care and maintenance | 58 |
| Addressbook | 21 | Product data | 59 |
| Phonebook | 23 | Guarantee certificate (UK) | 60 |
| Call records | 25 | Guarantee certificate (IRL) | 61 |
| Camera | 26 | SAR | 63 |
| Message overview | 28 | Menu tree | 64 |
| SMS | 29 | Index | 70 |

This is a summarised version of the Operating Guide. The complete version can be found on the Internet at this address:
www.siemens.com/m65

Safety precautions

Information for parents

Please read the user guide and safety precautions carefully before use.

Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Ringtones (p. 42), info tones (p. 44) and handsfree talking (p. 18) are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens charging devices and batteries (100 % mercury-free). Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (volt) must not be exceeded. Otherwise the charging device may be destroyed.

The mains adapter must be connected to an easily accessible power socket to charge the battery. After charging the battery, the charger can only be switched off by unplugging it.



Do not open the phone. Only the battery and SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited and will invalidate the operating licence.

Important:



Dispose of used batteries and phones according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios or PCs.



Use only original Siemens accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety precautions also apply to original Siemens accessories.

As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **1.5 cm** is required.

Overview of the phone

① On/Off/End key

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level.
Hold **down** to return to standby mode.
- In standby mode: hold **down** to switch off phone.

In lists, messages and menus:

- Scroll up and down.
- Back one level.

During a call:

- Set volume.
- Call options.

② Call key

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialled in standby mode.

③ Display in standby mode

④ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g.).



⑤ Joystick

- Press the joystick vertically downwards to start an application or function.

In standby mode:

- Open main menu.
- Open user profiles.
- Open Phonebook/Address-book.
- Open **Inbox**.
- Start the camera.

 


- ① **Loudspeaker**
- ② **LED for dynamic light** (p. 42)
- ③ **Infrared interface (IrDA)**
- ④  **Ringtone**
 - **Hold down** in standby mode:
Switch all audible signals on/off (except alarm).
 - **Hold down** on incoming call:
Switch off ringtone for this call only.
- ⑤  **Key lock**

Hold down in standby mode:
Switch key lock on/off.
- ⑥ **Connection socket**

For charger, headset, flash etc.
- ⑦ **Integrated antenna**

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.
- ⑧ **Connection for external antenna**
- ⑨ **Camera lens**

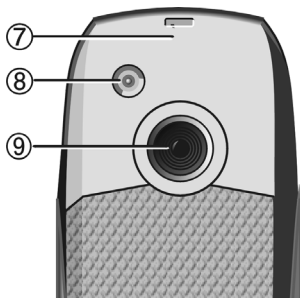

Display symbols

Display symbols (selection)



Signal strength

Battery charge level,
e.g. 50 %

Phonebook



Call records

Surf & fun/
Service provider portal

Organiser



Messages



Camera



Extras



My stuff



Setup



All calls diverted



Ringing tone off



Short ring (beep) only

Ringtone only if the caller is
stored in the Phonebook.

Alarm set



Keypad locked



Auto. answer on



Activated and available



Browser online



IrDA transmission

Events (selection)



SMS memory full



MMS memory full



Phone memory full



No network access



Missed call



Delete assistant

Message symbols (selection)



Unread



Read



Sent



MMS notification

MMS with DRM contents
(p. 11)

E-mail forwarded



E-mail with attachment



 
Voice mail received

Getting started


The phone must be assembled before you can get started.

SIM card and battery

- Place the SIM card in front of the slot with the contact surface facing **downwards**. Then slide the SIM into the holder ①).

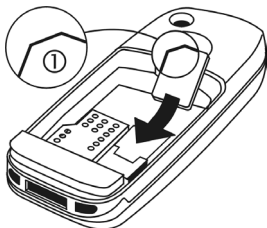


 - Insert the battery sideways into the phone ②, then press it downwards ③ until it clicks into place.

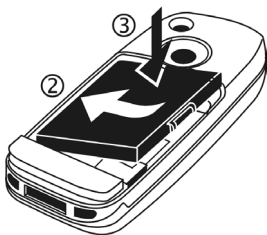


Battery cover

 - Pull the rubber gasket over the locating lugs ① on the cover, then push it onto the four studs ② so that it is firmly positioned on the cover.

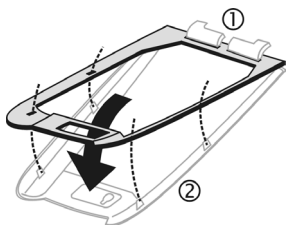

 - Push cover forwards ③ until the locating lugs engage in the openings in the phone.

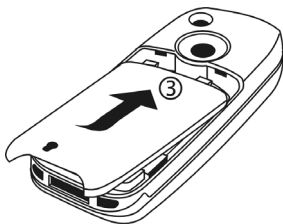


Additional information


Your phone's display is supplied with a **protective film**. Remove this film slowly before assembling the phone. In rare cases, static discharge may cause discolouration at the edges of the display. However this will disappear within approx. 10 minutes.

Metal bracket

 - Slide the metal bracket open until the openings in the metal bracket and in the cover are directly above each other ①. The hooks ② must engage in the openings on the front of the phone.

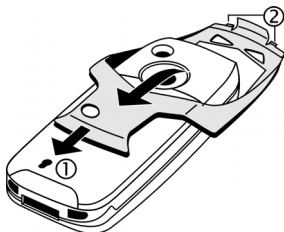


 - Insert the locking catch into the metal bracket ③ and turn it ninety degrees to the right ④ to join the metal bracket to the phone.

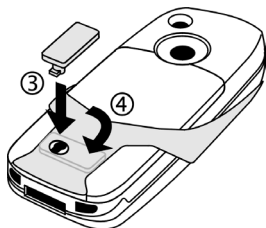

Seals

 - Insert the contacts cover ① into the connection socket.
- The camera lens and antenna socket are protected by the lens cap ②. Using the rubber washer ③ in its place does **not** offer better protection (p. 58).

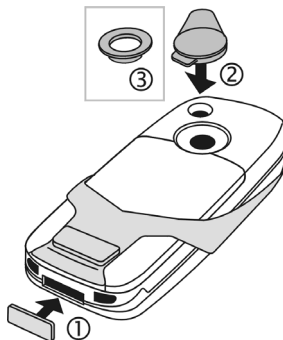

Additional information

Please switch off your phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older SIM card.

Charge battery

Charging procedure

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.



Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 330 minutes
Standby time: 60 to 300 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching phone on and off/entering PIN

Switching phone on/off



Hold key **down**.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct with **⏮**.



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information

Change PIN.....p. 14

Clear SIM card barringp. 15

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the **SOS** soft key you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly on a one-off basis when getting started.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...

Set

... and set it.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, do **not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 24).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



By **pressing and holding**, you can return to standby mode from any situation.

Signal strength



Strong signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g., copy protection, use for a limited period of time only, number of times it can be used etc.

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

| | |
|--------------|--|
| Big letters | Select between two font sizes. |
| Illumination | Set display illumination to brighter/darker. |
| Help | Display a help text. |

User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display record of missed calls in condensed form:




This comprises the following steps:



Open main menu.



Select (highlight)  by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight **Calls missed**.



Confirm. The record is opened.

Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from standby mode by entering a number:



Press to display the main menu. Then press



for **Messages**, then



for **Write message**, then



for **SMS**.

Symbols

The following symbols are used to explain operation:



Enter numbers/letters.



On/Off/End key



Call key



Soft keys



Displays a soft-key function.

The joystick can be moved in 5 directions.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the directions indicated.




Function dependent on service provider. Special registration may be required.

Standard functions

Option menus

List of functions repeatedly appearing in options menus.

| | |
|--|---|
| Options | Open menu. |
| Edit | Open the entry to edit. |
| View | Display entry. |
| Delete all | Delete entry/delete all entries after confirmation. |
| New entry | Create new entry. |
| Send... | Select transmission service and medium for sending or printing. |
| Reply/Reply to all | The sender becomes the recipient, "Re:" is placed in front of the subject matter and the received text is transferred into the new message. |
| Save | Store entry. |
| Save to  | Save recipients in the current address directory. |
| Sort | Set sort criteria (alphabetical order, type, time). |

| | |
|------------------------------|--|
| Text input (p. 16) | T9 preferred: Activate/deactivate T9 input. Input language: Select language for text. |
| Rename | Rename selected entry. |
| Capacity | Display memory capacity. |
| Attributes | Display properties of the highlighted object. |
| Help | Display help text. |

Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

| | |
|----------------|--|
| Options | Open menu. |
| Mark | Activate mode. |
| Mark | Highlight a non-highlighted entry. |
| Unmark | Remove the highlighting from a highlighted entry. |

Additional highlighting functions:

| | |
|----------------------|---|
| Mark all | Highlight all entries. |
| Unmark all | Delete highlighting on all highlighted entries. |
| Delete marked | All selected entries are deleted. |


Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

| | |
|-------------|--|
| PIN | Protects your SIM card (Personal Identification Number). |
| PIN2 | This is needed to set the charge detail display and to access additional functions on special SIM cards. |
| PUK PUK2 | Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly. |
| Phone code | Protects your phone. Must be entered at the first security setting. |

 

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Select Press.



Enter PIN.



Confirm input.

Change Press.



Confirm.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.



Change PIN2

(Display only if PIN2 is available).

Proceed as for **Change PIN**.

Chg.phonecode

(Change phonecode)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, p. 47). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (p. 56).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 14) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold **down**.



Press. The phone switches on.

Cancel

Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. Example:



Press once **briefly** to write the letter **a**, twice to type **b** etc. **Press and hold** to write the number.



Press briefly to delete the letter before the cursor. **Hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*.

Hold down: All input-variants are displayed.



Press briefly: Special characters are shown.

Hold down: Open input menu.



Press once/repeatedly:

., ? ! ' " 0 + - () @ / : _

Hold down: Writes 0.



Writes blank. **Press twice** = line break.

Special characters



Press briefly.

| | | | | | | | | |
|----|---|----|----|---|---|---|---|---|
| 1) | ¿ | ¡ | _ | ; | . | , | ? | ! |
| + | - | " | ' | : | * | / | (|) |
| ¤ | ¥ | \$ | £ | € | @ | \ | & | # |
| [|] | { | } | % | ~ | < | = | > |
| | ^ | ` | \$ | Γ | Δ | Θ | Λ | Ξ |
| Π | Σ | Φ | Ψ | Ω | | | | |

1) Line break



Navigate to characters.



Press.

Text entry menu



Hold down:

Text format (SMS only),
Input language, Mark,
Copy/Insert

Text input with T9

"T9" uses individual key entries to deduce the correct word.



Activate/deactivate T9.

Select input language



Open text menu.

Select **Text input**, then
select **Input language**.



Confirm.

Write with T9

It is best if you finish a word without looking at the display.

You simply press the keys where the relevant letter is located **once only**.

/ A blank space or moving to the right ends the word.

Do not input special characters such as Ä. Use standard characters only, e.g. A. T9 will do the rest.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.

Press. If this word is also incorrect, press again.

Keep pressing until the correct word is displayed.

Add a new word to the dictionary:

Select and enter word without T9. Then .

Correct a word

Words written **with** T9:

Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the last character in a word **and** displays a new possible word.

Additional information



Set a full stop. The word is concluded if it is followed by a space.



Press briefly: Switch between: **abc, Abc, T9abc, T9Abc, 123.**

Hold down: All input modes are displayed.



Hold down: Opens input menu (p. 16).

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945 928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Text modules




→ Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Calling



Enter the number (always with area/international dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Dial phone number.

End call



Press the End key **briefly**.

Set volume



Press upwards/downwards in order to regulate the volume.

Redial previous numbers



Press **twice**. The phone number **last** called is redialled.

Call up the redial list:



Press **once**.



Pick out a phone number, then to dial press the ...



... key.

Auto. redial

Auto dial The phone number is dialled ten times at increasing time intervals.

Reminder

Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call



Press.

Reject call



Press **briefly**.

Additional information

Accept the call before bringing the telephone to your ear in order to avoid ear damage caused by the ringtones.



Store phone number in the Addressbook/Phonebook.

Handsfr.

Playback from loudspeaker (handsfree talking).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!



Press and hold to switch microphone off.

International dialling codes



Press and hold until a "+"- is displayed.

Country

Select country.

Call options

Options Functions which are only available **during** the call are offered.

Swapping between two calls

Establish a second connection

Options Open menu.

Hold Hold current call, then dial the new phone number.

Options Open menu.

Swap Swap between calls.

Incoming calls during a call

You will hear a "call waiting tone" and you can now:

- **Accept the waiting call in addition to the first**

Swap Accept the call and put the current call on hold.

- **Reject the waiting call**

Reject Reject the call, or via **Divert** divert it to the mailbox.

- **Accept the waiting call and end the current call**



End call.



Accept new call.

End call(s)



Press the End key.

Yes

Resume held call.

No

End all calls.

Conference

You call up to 5 conference participants one after the other. Once you have established a connection:

Options Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

Options ... open menu and select **Conference**. Repeat until all participants are connected.

End



All calls in the multiparty conversation are ended when the End key is pressed.

Tone sequences (DTMF)

Enter tone sequences (digits) for remote inquiries to an answering machine.

Options Open menu and select **Send DTMF**.

Default book



→ Select function.

Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also p. 21)

Phonebook (see also p. 23)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addressbook

Addressbook

In the Addressbook, a lot of data can be recorded for each entry, and additional functions (such as pictures, birthdays, chat room) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

Save

Press.

Additional information

The contents of the business card and the Addressbook entries correspond to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Groups

See p. 22.

<Info numbers>

See p. 24.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed in the phone memory separately from those in the Phonebook.

New entry

The Addressbook is set as standard:



Open Addressbook (in standby mode).



Display input fields.



Select required input fields.



Fill in input fields.

At least one name must be entered. Always enter phone number with dialling code.

Special input fields:

Group: Allocation to a group (p. 22).

Address: Extension to enter the complete address: **Street:**, **Post code:**, **City:**, **Country:**

Com. services

Information if the entry is being used as a chat contact:

Nickname:, **WV user ID:**, **ICQ number:**, **AIM screen name:**

Birthday: After activation, you can enter the date of birth.

Reminder: The telephone reminds you one day before the birthday at the time entered.

Picture: Assign a picture to the entry. It is displayed if you are called by a corresponding phone number.

All fields/Reduced fields

Displays the number of input fields.

Save

Save the entry.

Additional information



Temporary switch to Phonebook.

Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.

Display options

Options

Displays functions for the selected input field.

Change entry



Open Addressbook (in standby mode).



Select entry and press **Edit**.



Select input field and, if applicable, press **Edit**.



Make changes, then **Save**.

Call entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



The number is dialled.

If there are several numbers in the Addressbook entry, these are offered for selection.

Addressbook options

Different functions are available, depending on the context:

Options

Open menu.

Move to ...

Assign current entry or highlighted entries to a group.

Copy to SIM

Copy name and number to the SIM card (Phonebook).

Import

Set up readiness to receive for an Addressbook entry via IrDA (p. 46) or SMS (p. 29).

(For standard functions see p. 13)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).



Select group.

Ringtone for group

See p. 42.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook.

New entry

If the Phonebook has been selected as standard:



Open Phonebook (in standby mode).



Select <New entry>.



Display input fields.



Navigate between and fill in the input fields.

Phone number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No group**

Important phone numbers are combined together in a group (VIP).

Location:

Default SIM

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Save

Press to store the new entry.

Additional information



Temporary switch to Addressbook.



International dialling code.....p. 18

Call (search for an entry)



Open Phonebook.










Select a name with the first letter and/or scroll.



Phone number is dialled.

Change entry

-  Open Phonebook (in standby mode).
-  /  Select entry in Phonebook.
-  Press.
-  Select desired input field.
-  Make changes.
-  Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy into  Copy all highlighted entries to the Addressbook.


Copy all to  Copy all entries to the Addressbook.

Delete all Delete entire Phonebook (PIN-protected).

Import Set up readiness to receive for a Phonebook entry via IrDA (p. 46) or SMS (p. 29).

(For standard functions see p. 13)

<Special books>

-  Open Phonebook and select <Special books>.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

Call records

Phone numbers are saved to make it easier to redial them.



Select record.



Open call record.



Select phone number.



Dial phone number.

10 phone numbers can be stored in each call record:

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Missed call.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete records

The records are deleted.

Time/charge

You can display the charges and duration during a call.



→  → Time/charge

Select

Last call:, Incoming calls:, Outgoing calls:, Outgoing SMS:, Outgoing MMS:, GPRS data flow:, All calls:, Remaining units:

Reset

Reset the selected setting.

Charge sett.



Open menu.

Personal rate

Enter the currency as well as the charge per unit and time.

Account limit

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo/video via MMS or e-mail.

Switch on



Or



Start camera in standby mode.



Switches between frame and videorecording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance



Flash connected.

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably according to the subject matter (storage space required). You will find a reference to the selected resolution beneath the preview image. In video

mode, the recording time already used and the maximum recording time still available is shown here.

Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu (p. 27).

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

Image resolution

The image resolution quality can be adjusted regardless of the preview image resolution.

| | |
|-------------------|-------------------|
| Premium: | 640 x 480 (VGA) |
| High: | 320 x 240 (QVGA) |
| Medium: | 160 x 120 (QQVGA) |
| Wallpaper: | 132 x 176 |

The resolution may decrease depending on the selected digital zoom.

Video mode

The video mode resolution is the same as the preview image resolution.



Start the video recording.



End the video recording.

A red dot appears in the top right of the display while the video recording is being made.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly charged while connected to the phone. This reduces the stand-by time.



This symbol appears when the flash is being charged.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Settings

- Name for recordings
- Image resolution

Pictures

Displays list of photos.

Other videos

Displays list of videos.

Microphone on

Switches the microphone on or off.

Use flash

Choose between:
Automatic, Off, Red eye red.

Self timer

The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second.

White balance

Choose between:
Automatic, Indoor, Outdoor

(For standard functions see p. 13)

Additional information



There is insufficient storage space available. Start the delete assistant to delete specific data (p. 45).

Message overview

Inbox

The inbox folder contains all the messages that have been received. The entries are marked with a symbol to indicate their type and status (p. 6).

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time (**Options**), entries which have already been read and opened are only displayed in the message-related incoming lists.

In the inbox folder, you will find the following **message types**:

SMS, MMS, E-mail

System messages:

Notification about **MMS**, Missed alarm, Missed appts., Calls missed, WAP push, Voice message.

Data items:

Ringtones, **Pictures** and **Video**, calendar entries, **Notes** and **Business card**.

Message lists

All **SMS**, **MMS** and **E-mail** are each displayed in four lists.



→ **Inbox**

→ Select message type.

List of received messages.



→ **Draft**

→ Select message type.

List of saved drafts.



→ **Unsent**

→ Select message type.

List of messages not yet successfully sent.



→ **Sent**

→ Select message type.

List of sent messages.

Options

Call up the function menu to process the messages.

Inst. message









This function is not supported by all service providers. Please contact your service provider for more information. You will find a description in the comprehensive operating instructions on the Internet at:

www.siemens.com/m65

SMS

You can transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges). Additionally you can insert pictures and sounds in an SMS.

Write/send





-  →  → Write message → SMS
-  Enter text (see also p. 16).
Options Text creation functions.
-  Start sending procedure.
-  Select phone number from the Phonebuch/Addressbook or enter it.
-  The SMS is transmitted to the service centre to be sent.

Special functions


Picture&sound

Send pictures and sounds with or without accompanying text. Remember that these may be protected (DRM, p. 11).



With the text input field open:

- Options** Open menu.
-  Select **Picture&sound**.
The menu contains:
Fix animations, Fix sounds, Own animat., Own pictures, Own sounds
-  Select list.
-  Confirm. The first entry in the selected list is displayed.
-  Scroll to entry required.

For **Fix animations/Fix sounds**:

-  The selection is added to the SMS.

For **Own animat., Own pictures, Own sounds**:

-  The selection is displayed/played back.
-  The selection is added to the SMS.

SMS archive

-  →  → SMS archive

The list of SMS messages stored in the phone is displayed.

SMS to group

You can send an SMS message to a recipient group.

Options

Open menu.

Send

Select.

Group

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Sending is started after a security prompt.

Read



Arrival of a new SMS announced in the display.

Inbox is opened. It offers you a quick overview of the messages that have been received.



To read the SMS, press the joystick.



Scroll through message line by line.



If this symbol flashes, the SIM memory is full. Delete or archive messages.

Reply

You can answer the SMS immediately. The newly added text is placed above the received text.



Functions for a direct reply.

Setting

SMS signature



→ Message setup
→ SMS → SMS signature

You can enter a “signature” with up to 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

SMS profiles



→ Message setup
→ SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these.

Activate profile



Select profile.



Activate.

Set profile



Select profile and open with **Edit** to process it.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on your telephone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Create

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, p. 11).

Create standard MMS



→ Write message → MMS

First select an object for processing to be added to the first page of the MMS:

<Picture> Select.



Display picture/video functions: **Insert picture**, **Insert video**, **Camera**

<Sound> Select.



Display sound functions:
Insert sound, **Record**

<Text> Select.



Display text functions
(see also p. 16).

Options

Options

Open menu.

Send MMS

Send MMS.

Play

Play entire MMS on the display.

Picture...

See above.

Sound...

See above.

Text...

See above.

Page

Add page: Insert new page behind current one.

Delete page: Delete current page.

Page list: Display available pages.

Timing: Set the time sequence for the MMS presentation:

- **Page duration:**
Automatic or **Manual**
- **Show page:**
Only if **Manual** is set in front of it. Enter the lifespan of a page.

Msg. details

Enter sending parameters (see next chapter).

| | |
|-----------------------|---|
| Save as templ. | After creating MMS, save it as a template. See also below. |
| Layout | Select one of four possible layouts: Text above, beneath, beside (on left or right of) picture. |
| Colours | Select the colours for: <ul style="list-style-type: none"> • Message • Page • Bitmap • Text backg. • Text colour |

(For standard functions see p. 13)

Templates

 →  → MMS templates

MMS templates are saved MMSs with no address. They can be sent as new MMSs or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


Options Open menu and select **Save as templ.**

Send

The page(s) of the new MMS has (have) already been created. The MMS is displayed.






Open address entry.


 **MMS**

 Subject:
Greetings from Munich

Send to:
+1234567654321 |

Size:
85 KB


Options

Subject: Enter a brief description of the MMS.

Send to: Enter one/several phone number(s)/e-mail address(es).

Size: Display the MMS size.



Start sending procedure.



The MMS is sent after confirmation.

More: Provide additional address fields.



Sending options

Options Open menu.

| | |
|----------------|--|
| Send MMS | Send MMS. |
| Play | Play entire MMS on the display. |
| Edit | Display object selection to change an object. |
| Add recipient | Add recipient from the current address directory. |
| Delete recip. | Delete individual recipient. |
| Add attachm. | Add attachment: <ul style="list-style-type: none"> • File • Business card • Appointment |
| Page list | Display MMS pages for viewing and/or changing. |
| Save as templ. | Save created MMS as a template. |

(For standard functions see p. 13)

Receive

  Arrival of new MMS/notification announced on display.



Start reception. Depending on the setting, (p. 34) the MMS/notification is transferred into the central incoming message list (**Inbox**).

In order to receive the complete MMS **subsequently**, the notification must be opened.

Receive Start transmission.

Read

An MMS has been received in full.



Start playback.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

More: Additional input fields.


Setting

 →  → Message setup → MMS
 → Select function.

MMS profile:

Six MMS profiles can be set. The sending properties are specified in these profiles. In most cases, the setting are preloaded. If necessary, check with your service provider for details.

 Select profile.

 Open to edit the profile.

Setting options

Options Open menu.

Activate, Rename, Change sett.

User settings

Set the MMS dispatch to suit your requirements:

| | |
|--------------------------|--|
| Delivery report: | Request delivery confirmation for sent messages. |
| Read reply: | Request confirmation that the MMS has been read. |
| Default priority: | Send priority: Normal, High, Low |


Validity: Select the period in which the service centre is to try to deliver the message:
 Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*
 * Maximum period that the service provider permits.

Earliest deliv. time: Transmission from the service centre to the recipient:
 Immediate, Tomorrow

Default duration: Length of display for an MMS page (standard requirement).

Retrieval: Receive complete MMS or only notification of arrival.
 Immediate
 Receive complete MMS immediately.
 Auto.homenet
 Receive complete MMS immediately in home network
 Manual
 Only the notification is received.

Spam filter: Settings for receipt of promotional MMS.

Size indication:  Set a max. message size and how it is to be dealt with.

E-mail

Your telephone has an e-mail program (client) with which you can write and receive e-mails.

Write/send



→ Write message → E-mail

Enter address data:

Send to: Enter one or more e-mail address(es).

Subject: Enter the title of the e-mail.

Content Enter text.

To send:

Options Open menu.

Send e-mail
Select.

Or

All fields Open additional input fields.

Attachments:
Add attachments such as pictures and sounds.

Receive/read



→ Inbox
→ Select function.

Before an e-mail can be read, it must be retrieved from the server.

Retr. e-mail Only the message header is sent.

Options Open menu and select **Retrieve body**.

Send/rec. mail

All e-mails are sent to the **Inbox** and all completed e-mails from the **Unsent** list are sent.

Setup



→ Message setup → E-mail

Before using this service, you must set the server access and your e-mail options. Most of this data has already been entered or may be obtained from your service provider. See also on the Internet at:

www.siemens.com/m65

Activate access



Select access.



Activate access.

Account sett.



Select access or <Empty>.



Starts processing. Fill in the data fields in accordance with the service provider template.

Voice message/CB

Voice message



If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and make manual settings.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.



Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.



Enter phone number and register it at the network with **OK**.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and hold **down** (if necessary enter mailbox number). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your **Topic list**.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (**Browser settings**, S. 38; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

| | |
|-----------|--|
| Homepage | Call up the pre-set homepage or the current profile (p. 38). |
| Bookmarks | Display bookmarks stored in the phone; save bookmark. |
| Go to... | Enter a URL. |
| Reload | Reload current page. |

| | |
|--------------|---|
| Show URL | Display the URL of the page currently loaded for sending via SMS/e-mail. |
| History | Display last Internet sites to be visited. |
| Disconnect | Disconnect the Internet. |
| File | Save object on the current page or save the complete page, display saved pages. |
| Setup | Browser settings (p. 38). |
| Exit browser | Close the browser. |

End connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.

 


- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser



Enter special characters



Browser settings



Options Open menu.

Setup Select.

| | |
|----------------------------|---|
| Browser | Set start option as well as handling of pictures and tones and send options. |
| Profiles | The list of profiles is displayed for activation/setting (see below). |
| Protocol parameters | Set protocol parameters, push messages and abort time as well as handling of Cookies. |
| Security | Set encryption. |
| Context | Reset session; delete cache, history and Cookies. |

Your Internet browser is licensed by:



OPENWAVE™



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider. You can change settings and delete profiles here.

Bookmarks



→  → **Bookmarks**

URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

Games and Applications

Games and applications are offered on the Internet. Once downloaded, these are permanently available on your phone. Most applications include instructions. Some applications and games are already pre-installed on your telephone. You will find these listed here:

www.siemens.com/m65

Requirements

Browser profile (p. 38) and the access (p. 46) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:



→  → Games/Applications

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download new



Select a service provider or URL.



Start internet browser and visit URL.

Additional information

You can use the Browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. If technically possible, secure your applications on the PC with the "mobile phone manager".

Downl. assist.



→  → Downl. assist.

You will not be left on your own during the download!

Setup

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however: **Normal environment**, **Quiet environment**, **Noisy environment**, **Car Kit**, **Headset**
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu and select **Change sett.**

The list of available functions is displayed. When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically as soon as the phone is inserted into the cradle (also see accessories).

Headset

The profile is only switched on automatically if an original Siemens headset is used (see accessories also).

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.




Themes



Load a completely new visual presentation onto your phone. With the press of a key, various functions are re-organised on a topic basis, e.g. switch on/off animation, background image, screensaver, switch on/off melody, additional animations.

Topic files are compressed to save memory space. After being downloaded (p. 39) or called up from **My stuff**, these are automatically unzipped when activated.

Activate new topic

-  Select topic.
-  Display topic preview.
-  Activate new topic.


Display



Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

***#0000#** 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose graphic to be displayed instead of the provider logo.

Colour skin

Select colour skin for the entire user interface.

Screensaver

The screensaver shows a picture in the display as set by you. An incoming call and/or pressing any key will end the function except if the safety function is activated.

Start up anim.

Shown when the phone is switched on.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker.

Dynamic light



→ Dynamic light
→ Select function.

The LEDs on the sides of the phone are used to signal different functions visually.

Show effects

Switch on function.

Select

You can set visual signals for various functions.



Display the possible rhythms.



Select them from several flash rhythms.



Assign selection.

Play demo

All flash rhythms are displayed in sequence.

Ringtones



→ Ringtones
→ Select function.

Set the signal tones on the phone to suit your requirements.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The vibration alarm can be switched on in addition to the ringtone. This function is deactivated when the battery is being loaded and accessories are connected (except the headset).

Volume

Set different volumes for types of call/functions.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Call setup

 →  → **Call setup**
→ **Select function.**

Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other phone numbers.

Set up call divert (example):

Unanswered



Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below).



Confirm and select **Set**, then enter the phone number to which the call will be diverted.



Confirm. The setting is confirmed by the network.

All calls

All calls are diverted.



Icon in the top line of the display in standby mode.


Other possibilities for divert:

Not reachable, No reply, Busy, Receiving fax, Receiving data

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key (except for .

Minute beep

During the call, you (and only you!) will hear a beep after each minute as a reminder of the time elapsed.

Phone setup

→ **Phone setup**
→ Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Automatic switch off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:

*** # 0 6 #**



Display further information about the appliance.

Device check

A self-test and individual tests are offered at the end of the last page of information. If you select **Selftest**, all individual test are carried out.

Software version

Display in standby mode:

*** # 0 6 #**, then press **Info**.

Memory assis.

The delete assistant will help you if there is insufficient phone memory.

File system

Format

(Phonecode-protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games etc. are deleted.


Clean up

Create more memory by deleting temporary files no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

*#9999# 

Clock

 →  → Clock
→ Select function.

Time/date


Change First enter the date, then the time.

Time zones

World map: Displays world time zones.

 Select a time zone.

City list: List of world cities.

 Select a city in the selected time zone.

Date format

Select the display format for the date.

Time format

Select **24h** or **12h**.

Buddhist year

Switch over to the Buddhist year.

Show clock

Activate/deactivate time display.

Auto time zone



The time is set automatically via the GSM network.

Connectivity



GPRS



(General Packet Radio Service)

GPRS is a method for transmitting data faster in the mobile network. For symbols in the display see p. 6.

GPRS info

Display connection information.

IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other. For symbols in the display see p. 6.

Data services

Default setting and activation of the connection profiles for **MMS**, **WAP** applications. The phone default setting varies from service provider to service provider. Consult your service provider or go to this address in the Internet for more information **www.siemens.com/mobilephonescustomercare** in the "FAQ" section.

HTTP profile

The phone default setting varies from service provider to service provider. Consult your service provider or go to this address in the Internet for more information **www.siemens.com/mobilephonescustomercare** in the "FAQ" section.

Authentication

Activate or deactivate encrypted Internet dial-up (CSD connections only).

Fax/data

Send voice/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

Rec. voice/fax

Start the required communication program on your PC and activate the function on the phone **during** the call (the PC will take over the connection).

Rec. fax/data



The call is signalled by a special ringtone and the type of call (fax or data) is displayed. Now start the communication program on your PC to receive the fax/data.

Security



→ Security
→ Select function.

Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

Block/unblock in standby mode. In each case:



Hold **down**.

Direct call

Only **one** phone number can be dialled. The required phone code (4 to 8-digits) is set by you and entered at the first security setting.



To switch off, hold **down**, then enter the phone code.

Only



Restrict calls to SIM-protected numbers in the Phonebook.

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Codes

For description see p. 14:
PIN control, Change PIN, Change PIN2, Chg.phonecode

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl. (outgoing international)

Only national calls can be made.

Out.int.x.home (outgoing international without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all barrings.

Network



Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

Network reconnection is speeded up.

User group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

Accessories



Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. Set the time that must elapse after the ignition has been switched off before the phone is automatically switched off.

Car loudspk.

Improves playback in certain circumstances.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Fast access

Soft keys



Assign one phone number or function to each of the two soft keys.

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

Internet Press **briefly**, then **Change**.
Select a new function from the list and confirm with

Apply

"Internet" is just used as an example here.

Internet Press and **hold**; the application is started.

Speed dialling keys

Assign a phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox.

Assign

Press number key (e.g. the 3) **briefly**, then press **Set**.

Select a new function from the list and confirm with .

Apply

Select a stored phone number or start a stored application (e.g. **Internet**).

In standby mode:

Press and **down**.

My menu

Press.

My menu Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Change menu

You can replace each entry (1–10) with another entry from the selection list.

Select entry.

Change Open the function list to make a selection.

Select the **new** entry from the list.

Confirm. The entry is saved.

Reset all

Reset all Select. After a secure prompt, the default setting is reset.

Organiser

 →  → Select function.


Calendar

You can enter appointments in the calendar. Time and date must be set correctly.

The calendar offers you three views: monthly view, weekly view, daily view.

The various entries are colour-coded. Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:

 /  Scroll between weeks/days/hours.

Calendar setup

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts

Set weekend

Set the days for the weekend.

Show birthdays:

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:



Memo: Text input for description



Voice memo: Enter voice memo.



Call: Enter phone number. This is shown with the alarm.



Meeting: Text input for description.



Holiday: Enter start and end date.



Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

Additional information



Alarm clock, alarm set.



Appointment, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 40). The phone does not go to standby mode. To deactivate it press any key.

 →  → Select function.

Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are made in the same way as **Appointments** (see "Appointments").

Notes

T9-support (p. 16) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code.

Missed appts.


Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Dictat.machine


Use the dictating machine to record short voice memos.

New recording


<New entry>
Select.

 After a brief beep, say the text.


 Pause/record alternately.

 End recording. The recording is automatically saved with a time stamp. Rename with **Options**.

Playback

 Select the desired recording.

 Playback/pause.

 Press and **hold** for rapid rewind and fast forward.

Time zones

See p. 45.

Extras



SIM services (optional)

SIM services

Your service provider may offer applications such as mobile banking, share prices, etc. via the SIM card.



Symbol for SIM services.

For further information, please contact your service provider.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.



Activate/deactivate the alarm.



Set the time for the alarm call (hh:mm).



Navigate to the various days.



Display options: alarm call time and days.



Set days for alarm calls. Press and **hold** to highlight/unhighlight all the days.



Confirm setting.

You can set the alarm to repeat with **Snooze**.

Sound recorder

Use the sound recorder to record noises and tones for use as ring-tones.

New recording

<New entry>

Select. The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows:

The recording display appears:



A brief tone sounds when the recording starts.



Pause/record alternately.



End recording.

The recording is saved with a timestamp in the **Sounds** folder. Rename with **Options**.

Insert

Transfer the recording into the application.

Playback



Select the desired recording.



Playback/pause.



Press and **hold** for rapid rewind and fast forward.



→ → Select function.

Calc.

The calculator can be used in a basic version with an extended range of functions (**Options**).



Enter digit(s).



Navigate functions.



Use function.

Unit converter

You can convert various measurement units into other measurement units.



Select the source unit/currency, then enter the quantity.



Select the target measurement unit / currency. The result is displayed.

Special key functions:



Set decimal point.



Change prefix.

Currency

When you call up the function the first time, enter the basic currency.



Enter currency (e. g. euro) and save the entry with **Save**.

Now enter the name and exchange rate of the currency to be converted.

Stopwatch

Two intermediate times can be recorded and saved.



Start/stop/reset to zero.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Remote synchronisation

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone.

Synchronise

Sync

Select calculator, start synchronisation.

Next

Scroll through the various displays.

Sync. setting

You can choose between 5 profiles.

My stuff

To organise your files, you have a file management function at your disposal. This functions in the same way as on a PC. Folders have already been created for different data types.



The list of the folders and files is displayed.

Navigation



Select a file/folder in lists.



The cursor can be moved in the preview.



Open folder or start file with related application.

Options

Access to various administration functions.

<New picture>/<New sound>

The application for the folder currently selected is loaded.

<New downl.>

The browser is started and the download page displayed.

Media player

When you are viewing a picture/video or listening to a melody, the application starts a media playback.



Browse to the next media file.



Switch on display illumination.

Pictures



Zoom. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.



Centre the picture.



Switch to full screen mode and back again.



E.g. send via MMS or e-mail.

Melodies/video



Play or stop, depending on the situation.



Switch to mute.



Set volume.



End playback.

Picture processing



Open menu and select Edit.

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **More**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline: **United Kingdom 0906 9597500** (0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

| | |
|------------------|------------------|
| Abu Dhabi | 0 26 42 38 00 |
| Argentina | 0 80 08 88 98 78 |
| Australia | 13 00 66 53 66 |
| Austria | 05 17 07 50 04 |
| Bahrain | 40 42 34 |
| Bangladesh | 0 17 52 74 47 |
| Belgium | 0 78 15 22 21 |

| | |
|--------------------------|----------------------------|
| Bolivia | 0 21 21 41 14 |
| Bosnia Herzegovina | 0 33 27 66 49 |
| Brazil | 0 80 07 07 12 48 |
| Brunei | 02 43 08 01 |
| Bulgaria | 02 73 94 88 |
| Cambodia | 12 80 05 00 |
| Canada | 1 88 87 77 02 11 |
| China | 0 21 38 98 47 77 |
| Croatia | 0 16 10 53 81 |
| Czech Republic | 2 33 03 27 27 |
| Denmark | 35 25 86 00 |
| Dubai | 0 43 96 64 33 |
| Egypt | 0 23 33 41 11 |
| Estonia | 06 30 47 97 |
| Finland | 09 22 94 37 00 |
| France | 01 56 38 42 00 |
| Germany * | 0 18 05 33 32 26 |
| Greece | 80 11 11 11 16 |
| Hong Kong | 28 61 11 18 |
| Hungary | 06 14 71 24 44 |
| Iceland | 5 11 30 00 |
| India | 22 24 98 70 00 Extn: 70 40 |
| Indonesia | 0 21 46 82 60 81 |
| Ireland | 18 50 77 72 77 |
| Italy | 02 24 36 44 00 |
| Ivory Coast | 05 02 02 59 |
| Jordan | 0 64 39 86 42 |
| Kenya | 2 72 37 17 |
| Kuwait | 2 45 41 78 |
| Latvia | 7 50 11 18 |
| Lebanon | 01 44 30 43 |
| Libya | 02 13 50 28 82 |
| Lithuania | 8 52 74 20 10 |
| Luxembourg | 43 84 33 99 |
| Macedonia | 02 13 14 84 |
| Malaysia | + 6 03 77 12 43 04 |
| Malta | + 35 32 14 94 06 32 |
| Mauritius | 2 11 62 13 |
| Mexico | 01 80 07 11 00 03 |
| Morocco | 22 66 92 09 |
| Netherlands | 0 90 03 33 31 00 |
| New Zealand | 08 00 57 43 63 |
| Nigeria | 0 14 50 05 00 |
| Norway | 22 70 84 00 |
| Oman | 79 10 12 |
| Pakistan | 02 15 66 22 00 |

* 0,12 Euro/min.

| | |
|-----------------------|------------------|
| Paraguay | 8 00 10 20 04 |
| Philippines | 0 27 57 11 18 |
| Poland | 08 01 30 00 30 |
| Portugal | 8 08 20 15 21 |
| Qatar | 04 32 20 10 |
| Romania | 02 12 04 60 00 |
| Russia | 8 80 02 00 10 10 |
| Saudi Arabia | 0 22 26 00 43 |
| Serbia | 01 13 07 00 80 |
| Singapore | 62 27 11 18 |
| Slovak Republic | 02 59 68 22 66 |
| Slovenia | 0 14 74 63 36 |
| South Africa | 08 60 10 11 57 |

| | |
|----------------------------|------------------|
| Spain | 9 02 11 50 61 |
| Sweden | 0 87 50 99 11 |
| Switzerland | 08 48 21 20 00 |
| Taiwan | 02 23 96 10 06 |
| Thailand | 0 27 22 11 18 |
| Tunisia | 71 86 19 02 |
| Turkey | 0 21 65 79 71 00 |
| Ukraine | 8 80 05 01 00 00 |
| United Arab Emirates | 0 43 66 03 86 |
| United Kingdom | 0 87 05 33 44 11 |
| USA | 1 88 87 77 02 11 |
| Vietnam | 84 89 20 24 64 |
| Zimbabwe | 04 36 94 24 |

Care and maintenance

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic components.
- Do not drop, knock or shake your phone. Rough handling can damage components inside the device! Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!
- The phone has better protection against splashes, dust and knocks if the supplied seals and the metal bracket are used as indicated in the assembly instructions (p. 8).

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Battery quality declaration

The capacity of your mobile phone battery is reduced each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can significantly reduce the operating times of your mobile phone, even after it has been fully charged.

The battery is, however, designed to be capable of being charged and discharged for a period of six months from when the mobile phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Only purchase original Siemens batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or go to:

**www.siemens.com/
mobilephonescustomercare**

CE 0168

Technical data

| | |
|------------------------|------------------------------|
| GSM class: | 4 (2 watt) |
| Frequency range: | 880 - 960 MHz |
| GSM class: | 1 (1 watt) |
| Frequency range: | 1,710 - 1,880 MHz |
| GSM class: | 1 (1 watt) |
| Frequency range: | 1,850 - 1,990 MHz |
| Weight: | 105 g |
| Size: | 109 x 49 x 19 mm (89 ccm) |
| Li-Ion battery: | 750 mAh |
| Operating temperature: | -10 °C - +55 °C |
| SIM card: | 3.0 V |

Phone ID

You will need the following details if you lose your phone or SIM card:
the number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

the customer service number of the service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 330 minutes

Standby time: 60 to 300 hours

| Action taken | Time (min) | Reduction of stand-by time by |
|----------------|------------|-------------------------------|
| Calling | 1 | 30 -90 minutes |
| Light * | 1 | 40 minutes |
| Network search | 1 | 5 -10 minutes |

* Keypad input, games, organiser etc.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking

the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.

- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a

Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.

- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

SAR

European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE /
SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL
GUIDELINES FOR EXPOSURE TO
RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0,88 W/kg**¹. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on

the body. In this case, at data transfer (GPRS) a separation distance of 1.5 cm is required.

 
As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

 
The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

 
Additional Information can be found on the websites of the World Health Organization (www.who.int/emf) or Siemens (www.siemens.com/mobilephones).

 
1. The tests are carried out in accordance with international guidelines for testing.

 
Menu tree

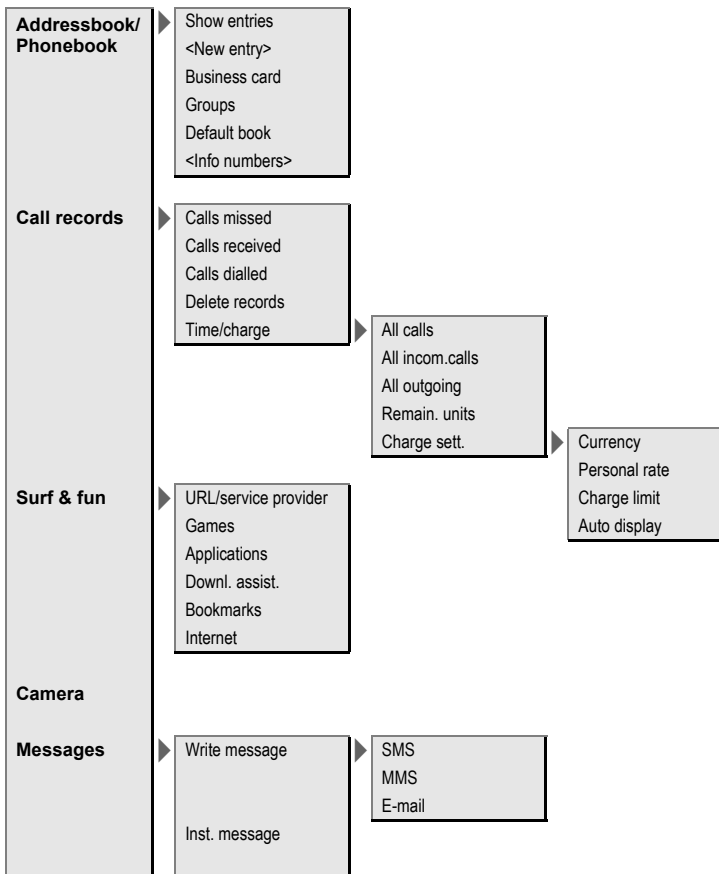 


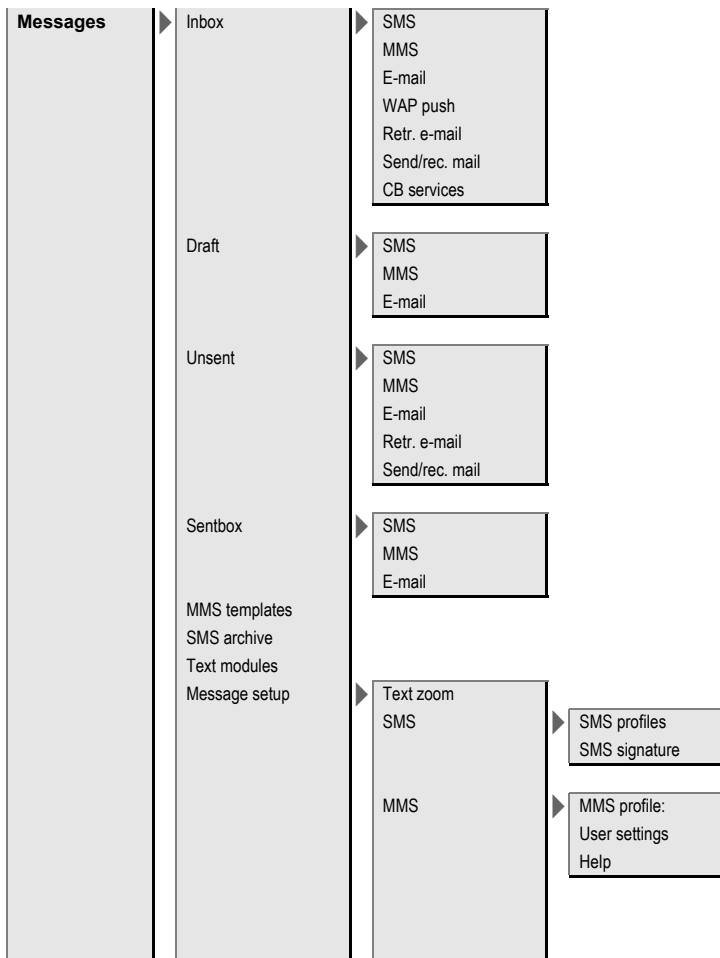

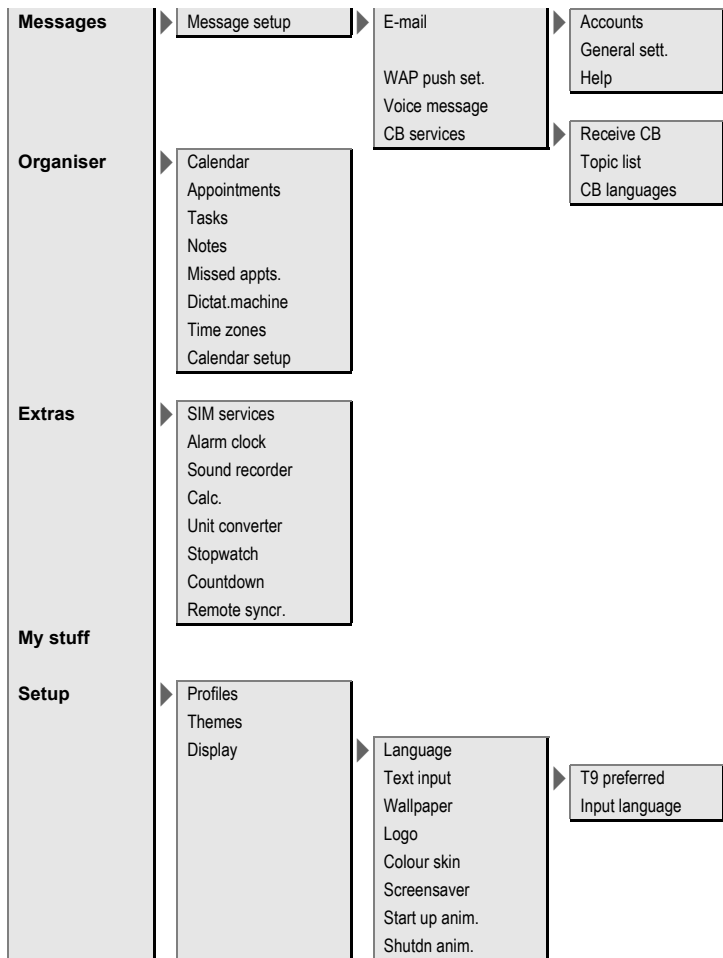

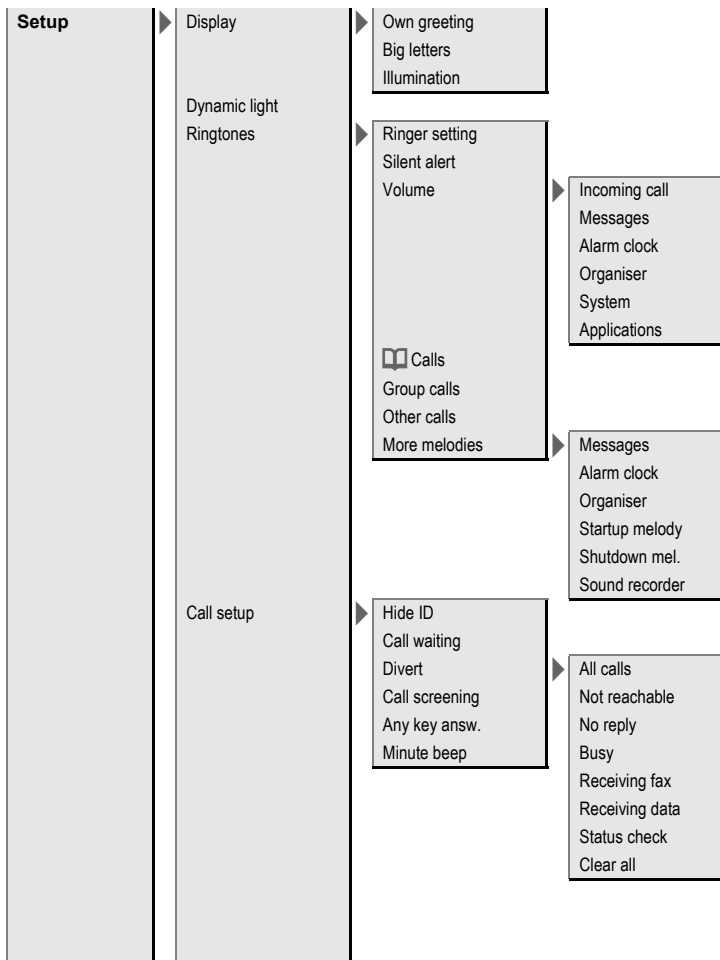

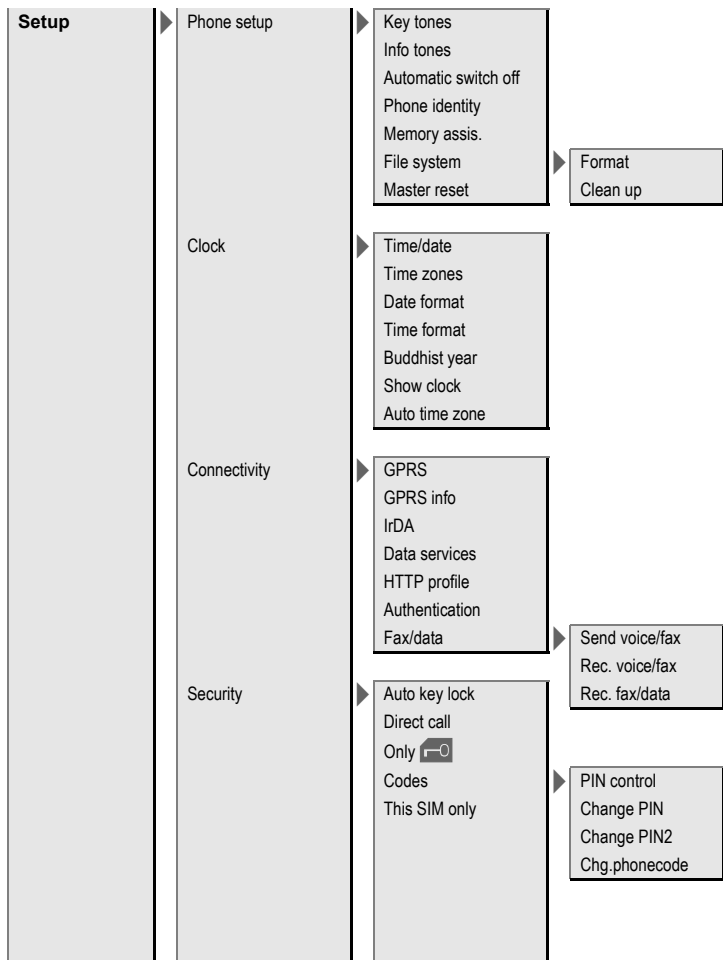

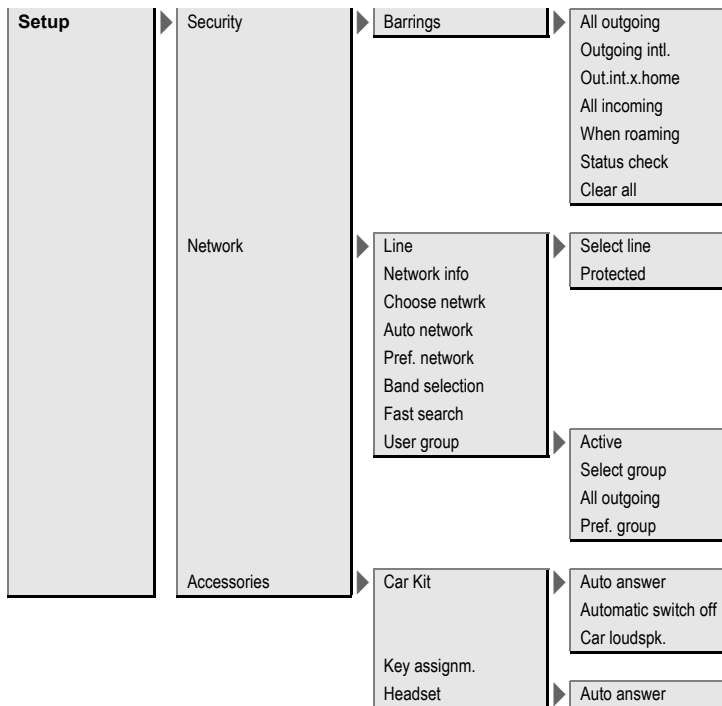

Index

A

| | |
|-----------------------------------|----|
| Addressbook | |
| Dial entry..... | 22 |
| Groups | 22 |
| New entry..... | 21 |
| Read entry | 22 |
| Aircraft mode | 40 |
| Alarm (alarm clock) | 53 |
| All calls (diversion) | 44 |
| All incoming (barrings) | 47 |
| Answering service (external)..... | 36 |
| Any to answer | 44 |
| Appointments | 51 |
| Auto display | |
| Clock | 45 |
| Duration/charges | 25 |
| Auto key lock..... | 47 |
| Auto. network selection..... | 48 |
| Auto. redial | 18 |

B

| | |
|--------------------------|-------|
| Band selection | 48 |
| Battery | |
| Charge..... | 9 |
| Insert..... | 7 |
| Operating times..... | 9, 59 |
| Quality declaration..... | 58 |
| Big letters | 42 |
| Bookmarks | 38 |
| Browser..... | 37 |
| Buddh. year | 45 |
| Business card..... | 20 |

C

| | |
|-----------------------------------|----|
| Calculator | 54 |
| Calendar | 51 |
| Call | |
| Accept/end | 18 |
| Barring | 47 |
| Charges..... | 25 |
| Conference | 19 |
| Divert..... | 43 |
| End | 18 |
| Hold..... | 19 |
| Menu | 19 |
| Reject..... | 18 |
| Swap (change) | 19 |
| Call divert | 43 |
| Call screening | 44 |
| Call waiting..... | 43 |
| Calling | 18 |
| Calls dialled (call record) | 25 |
| Calls received (call record)..... | 25 |
| Camera..... | 26 |
| Car kit (setting) | 48 |
| Care of phone | 58 |
| Cell Broadcast (CB) | 36 |
| Central inbox | 28 |
| Charge rate..... | 25 |
| Charges | 25 |
| Charging the battery | 9 |
| Clock | 45 |
| Colour skin..... | 41 |
| Conference | 19 |
| Connectivity | 46 |
| Control code (DTMF) | 19 |
| Countdown..... | 54 |
| Credit limit..... | 25 |
| Currency converter | 54 |

D

| | |
|---------------------------------|----|
| Date format..... | 45 |
| Default book | 20 |
| Dialling code | 18 |
| Dialling with number keys | 18 |
| Dictating machine | 52 |
| Display | |
| Illumination | 42 |
| Language | 41 |
| Symbols..... | 6 |
| Divert | 43 |
| Download | 39 |
| DRM | 11 |
| DTMF tones | |
| (tone sequences)..... | 19 |
| Duration/charges | 25 |
| Dynamic light | 42 |

E

| | |
|------------------------|----|
| E-mail | |
| Receive/read | 35 |
| Settings | 35 |
| Write | 35 |
| Emergency number | 10 |
| Extras | 53 |

F

| | |
|---------------------------------|----|
| Fast access | 50 |
| Fast search | 48 |
| Formatting (phone memory) | 45 |
| Frequency range | 48 |

G

| | |
|------------------------------|----|
| Games and applications | 39 |
| GPRS | 46 |
| Groups | 22 |
| Guarantee certificate | 60 |

H

| | |
|-------------------------|----|
| Handsfree talking | 18 |
| Headset (setting) | 49 |
| Hide ID | 43 |
| Highlighting mode | 13 |
| Hold call | 19 |
| Hotline | 56 |

I

| | |
|----------------------------------|----|
| Identity number (IMEI) | 44 |
| Info tones | 44 |
| Information services (CB) | 36 |
| Infrared | 46 |
| Input language (T9) | 16 |
| Inst. message..... | 28 |
| International dialling code..... | 18 |
| Internet | 37 |
| IrDA (infrared)..... | 46 |

K


| | |
|----------------|----|
| Key tones..... | 44 |
|----------------|----|

L

| | |
|--------------------------------|----|
| Language..... | 41 |
| Limit (call time/charge) | 25 |
| Logo | 41 |
| Loss of phone, SIM card | 59 |

M

| | |
|----------------------------|----|
| Mailbox | 36 |
| Maintenance of phone | 58 |
| Master reset..... | 45 |
| Media player | 55 |
| Menu | |
| Controls | 12 |
| My menu | 50 |
| Speed dialling | 12 |
| Menu tree..... | 64 |

| | | |
|--|--------|--|
| Message | | |
| CB | 36 | |
| E-mail | 35 | |
| Lists | 28 | |
| MMS | 31 | |
| SMS | 29, 30 | |
| Microphone on/off | 27 | |
| Minute beep | 44 | |
| Missed appointments | 52 | |
| Missed calls (call record) | 25 | |
| MMS | | |
| Receive | 33 | |
| Send | 32 | |
| Write | 31 | |
| Muting (microphone) | 27 | |
| My stuff | 55 | |
| N | | |
| Network | | |
| Barring | 47 | |
| Connection | 48 | |
| Settings | 48 | |
| Notes | 52 | |
| O | | |
| Only  | 47 | |
| Operating times (battery) | 9, 59 | |
| Organiser | 51 | |
| Own (phone) numbers | 24 | |
| P | | |
| Phone code | 14 | |
| Phone data | 59 | |
| Phone identity number | | |
| (IMEI) | 44 | |
| Phone number transmission | 43 | |
| Phonebook | | |
| Call an entry | 23 | |
| New entry | 23 | |
| Protected SIM | 24 | |
| Special books | 24 | |
| VIP numbers | 24 | |
| Photo mode | 26 | |
| Pictures & sounds (SMS) | 29 | |
| PIN | | |
| Change | 14 | |
| Control | 14 | |
| Enter | 10 | |
| PIN2 | 14 | |
| Preferred network | 48 | |
| Preventing accidental | | |
| activation | 15 | |
| Product data | 59 | |
| Profiles (telephone) | 40 | |
| Provider logo | 41 | |
| PUK, PUK2 | 14 | |
| R | | |
| Records | 25 | |
| Redial | 18 | |
| Reminder | 18 | |
| Remote synchronisation | 54 | |
| Ringtones | 42 | |
| S | | |
| Safety precautions | 2 | |
| Screensaver | 42 | |
| Security | 14 | |
| Security codes | 14 | |
| Service tones | 44 | |
| Set time/date | 45 | |
| Settings | 40 | |
| Short message (SMS) | 29 | |
| Shown in the display | 6 | |
| Shut down animation | 42 | |
| Signal strength | 11 | |
| Silent alert | 43 | |
| SIM card | | |
| Clear barring | 15 | |
| Insert | 7 | |
| SIM services (optional) | 53 | |

| | |
|---|--------|
| SMS | |
| Archive | 29 |
| Read | 30 |
| Settings | 30 |
| To group | 30 |
| Write | 29 |
| SMS push | 28 |
| SOS | 10 |
| Sound recorder | 53 |
| Special books | 24 |
| Special characters | 16 |
| Speech time (battery) | 59 |
| Speed dialling keys | 50 |
| Standard functions | 13 |
| Standby mode | 12 |
| Standby time | 9 |
| Start up animation | 42 |
| Stopwatch | 54 |
| Storage location (Phonebook) | 23 |
| Surf & fun | 37 |
| Swap | 19 |
| Switch off phone | |
| Automatic | 44 |
| Manually | 10 |
| Switch on phone | 10 |
| Symbols | 6 |
| Synchronisation | 54 |
| T | |
| T9 | |
| Text entry | 16 |
| Word suggestions | 17 |
| Tasks | 52 |
| Technical data | 59 |
| Text entry | 16 |
| Text modules | 17 |
| This SIM only | 47 |
| Time zones | 10, 45 |
| Topics | 41 |
| U | |
| Unanswered | 43 |
| Unit converter | 54 |
| Upper and lowercase letters (T9) | 16 |
| User group | 48 |
| V | |
| Video mode | 27 |
| Voice message | 36 |
| Volume | |
| Handset volume | 18 |
| Profiles | 40 |
| Ringtone | 43 |
| W | |
| Wallpaper (display) | 41 |