


# Inductive Loopset

(For use with T-coil equipped hearing aids)

## LPS-3

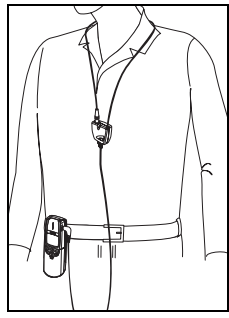

 


### General

The LPS-3 Inductive Loopset has been developed to facilitate the use of a mobile phone with a T-coil equipped hearing aid.


Since the loopset has a built in microphone, you will not need to hold the phone to your ear, but can use it in conjunction with a leather case or simply keep it in your pocket.

The operation of the device is based on the induction technology used in public places: A loop system sends out wireless signals that are picked up by the telecoil of your hearing aid (hearing aid must be switched to T mode).





The device described in this guide is compatible with the Nokia 8800 series of phones.

 First, insert the batteries. The LPS-3 requires three hearing aid batteries (675/PR44, SR44 or LR44, voltage 1.3 V – 1.5 V). There are batteries supplied with the device.



 Read any instructions and warnings supplied by the battery manufacturer carefully. For lengths of operation in different environments, contact the manufacturer of the batteries.




 **WARNING!**


- Keep the batteries out of the reach of small children.
- Promptly seek medical attention if batteries are swallowed.

**Inserting batteries:**


1 Open the protective cover by pressing it in the direction of the arrow (1) and by sliding it outwards (2).

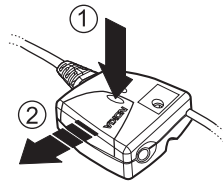

2 Insert the batteries (3 pieces) so that the + sign matches the + marking on the battery compartment.

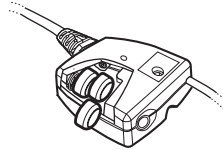


- 3 Put the protective cover back in its place.

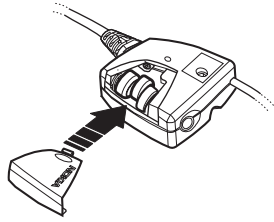


### Making and receiving calls

- 1 Place the loop around your neck and insert the round plug into the jack, forming a loop.


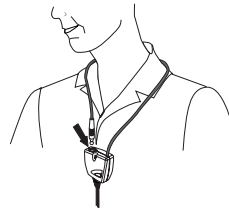




 
- 2 Connect the plug to the headset jack on the phone.  
The phone displays **"Headset"**.



 - 3 Switch your hearing aid to T-mode or MT-mode.

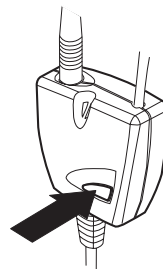


 
- 4 Make or answer a call normally.  
See the phone owner's manual for instructions. You may also answer and end a call by pressing the answering button on the device.





**Notes:**

  - The lead does not need to be connected to the phone at all times. You may choose to connect it only when you make or receive calls.
- When somebody is calling you, both the phone and the loop alerts. Setting the phone to vibrating mode (some models) improves the perception of an incoming call.
- You can adjust the volume of the device by using the phone's volume control (see your phone's Owner's Manual for instructions). Normally keep the volume on its lowest level to hear your own voice and background environment clearly. If the connection is weak or there is background noise, increase the volume so the noise becomes weaker and the voice of the person on the other end becomes stronger.
- The batteries run down only while you are making or receiving calls (when using non-zinc-air batteries). When the batteries have run out, you will hear a short beep sound at intervals of four seconds. End the call and change the batteries. You can also change the batteries without ending the call. When you do this, remove the lead from the headset jack, change the batteries and reattach the lead.








### Care and Maintenance


Your accessory is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years.

   - Keep the unit out of small children's reach.
- Keep the unit dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use or store the loopset in dusty or dirty areas. Internal moving parts can be damaged.
- Do not store the loopset in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt the unit.
- Do not store the loopset in cold areas. When the product warms up (to its normal temperature), moisture can form inside the unit, which may damage the electronic components.
- Do not attempt to open the unit. Non-expert handling of the loopset may damage it.





- Do not drop, hit or shake the unit. Rough handling can damage internal circuitry.
- Do not clean with harsh chemicals, cleaning solvents, or strong detergents. To clean, wipe with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the loopset. Paint can clog the device's moving parts and prevent proper operation.
- If the product is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

 

# NOKIA

CONNECTING PEOPLE

© 2001 Nokia Mobile Phones. All rights reserved.

Nokia, Connecting People and the Original Accessories logos are registered and/or trademarks of Nokia Corporation and/or its affiliates.

Version 1

Printed in Canada 10/02

9359531

