



Z600 Series Color Jetprinter™

User's Guide for Windows

- **Setup troubleshooting**

A checklist to find solutions to common setup problems.

- **Printer overview**

Learn about the printer parts and the printer software.

- **Printing ideas**

How to print several projects on various types of paper.

- **Maintenance**

Caring for your cartridges and ordering supplies.

- **General troubleshooting**

Error messages, print quality problems, paper jams, and much more.

January 2003

Edition: January 2003

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments about this publication may be addressed to Lexmark International, Inc., Department F95/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call +44 (0)8704 440 044. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.


Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries. Color Jetprinter is a trademark of Lexmark International, Inc. Other trademarks are the property of their respective owners.

© 2003 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

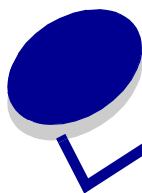

Contents

Chapter 1: Printer overview	5
Understanding the printer parts.....	5
Understanding the printer software	6
Chapter 2: Printing ideas.....	10
Printing on plain paper	10
Printing photos	11
Printing on premium or coated paper	13
Printing on both sides of a sheet of paper.....	14
Printing cards	17
Printing envelopes.....	18
Printing color images in black and white	20
Printing a booklet.....	22
Printing labels.....	25
Printing handouts	27
Printing a poster	29
Printing iron-on transfers	32
Printing transparencies.....	34
Printing your document in reverse order	36
Printing a banner.....	38
Printing on custom size paper	40
Chapter 3: Maintenance.....	42
Replacing the print cartridges.....	42
Aligning the print cartridges.....	45
Improving print quality	46
Preserving the print cartridges	47
Ordering supplies	48


Chapter 4: Setup troubleshooting	49
Troubleshooting checklist.....	49
Solving printer software installation problems	50
Chapter 5: General troubleshooting.....	53
Understanding error messages and flashing lights	53
Resolving unsuccessful or slow printing.....	54
Clearing paper misfeeds or jams.....	56
Solving print quality problems	58
Solving specialty media problems	60
Notices	61
Glossary.....	63
Index.....	66

1

Printer overview

Understanding the printer parts

Z600 Series Color Jetprinter™

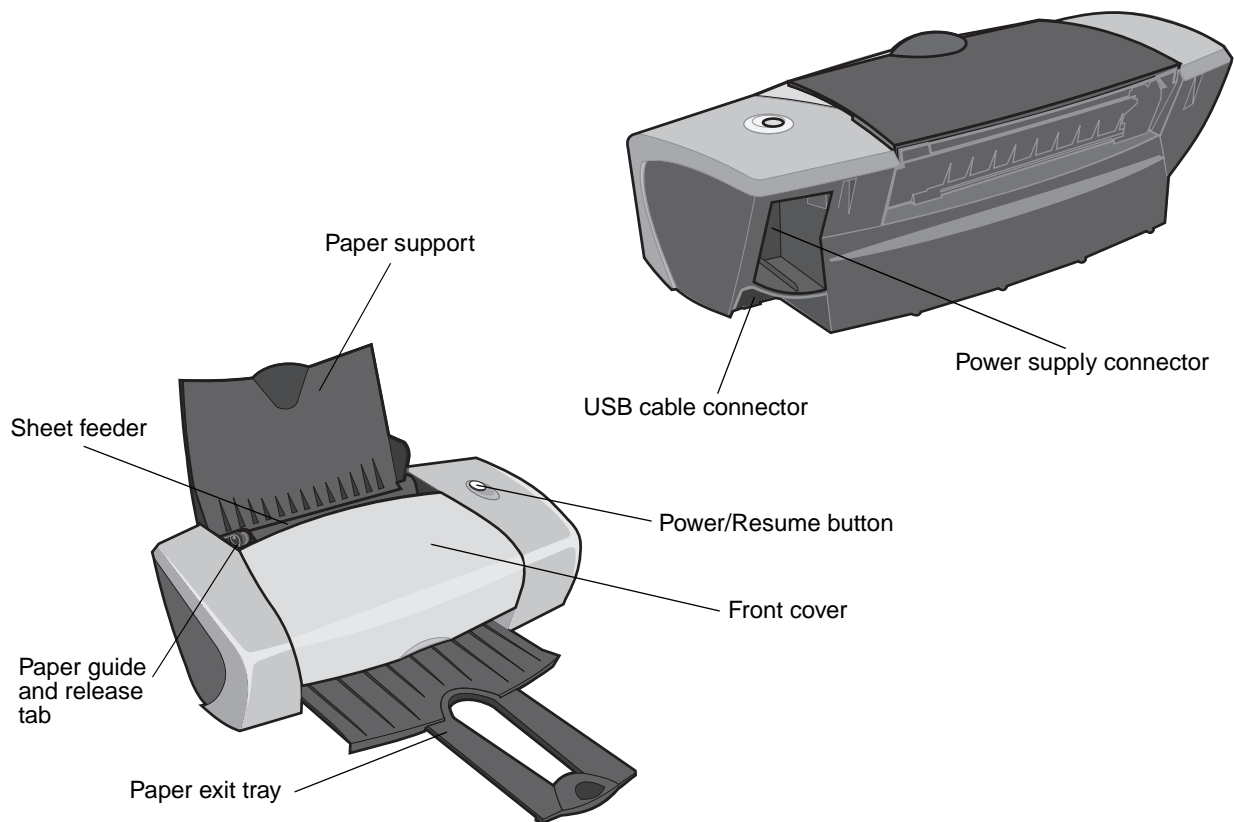


The following table describes each part.

Use this:	When you want to:
Power/Resume button	<ul style="list-style-type: none"> • Turn the printer on or off. • Eject paper from the printer. For more information, see “Printer has a paper jam” on page 57. • Check the printer status. For more information, see “Understanding error messages and flashing lights” on page 53.
Front cover	<ul style="list-style-type: none"> • Install or change print cartridges. • Clear paper jams.
Paper exit tray	Stack paper after printing.
Paper guide and release tab	Make sure paper feeds correctly into the printer.
Paper support	Keep paper straight in the sheet feeder.
Power supply connector	Supply power to the printer.
Sheet feeder	Feed paper automatically. For information about the amount of paper you can load, see “Printing ideas” on page 10.
USB cable connector	Connect the printer to the computer.

Understanding the printer software

Your printer software works with your operating system to print documents with superior results. This software has two parts: the Printer driver and the Lexmark Solution Center.

Printer driver

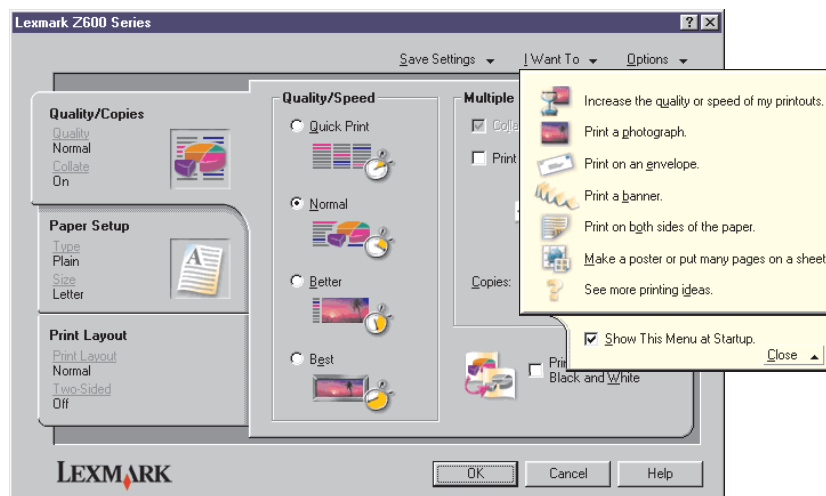

You can change your printer settings in the printer driver. To print a typical document on plain paper, you do not need to change your printer settings. When you install the printer software, the Page Setup dialog box and the Print dialog box are set to these default settings:

- Quality/Speed: Normal
- Type: Plain Paper
- Paper Size: A4 or Letter
- Orientation: Portrait
- Layout: Normal

For more information about the printer settings for different types of print jobs, see “Printing ideas” on page 10.

Customizing the settings for your document

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3 From the Quality/Copies tab, select a print quality setting.
- 4 From the Paper Setup tab, select a paper type and size setting.
- 5 From the Print Layout tab, change the layout of your document.
- 6 Click **OK** to apply your settings.

Quality/Copies tab

From:	Select:
Quality/Speed	<ul style="list-style-type: none"> • Quick Print when you want to print documents quickly, but with reduced print quality. • Normal when you want to print most documents on plain paper. • Better when you want to print photos and documents containing graphics on coated or glossy paper. • Best when you want to print crisp photos and high resolution graphics, but with reduced speeds.
Multiple Copies	<ul style="list-style-type: none"> • Collate Copies if you want to print more than one copy of a document. This option prints all the pages of the first copy, and then all the pages of the second copy, and so on. • Print Last Page First if you want to print the pages in reverse order. • The number of copies you want to print.
	<p>Print Color Images in Black and White to save the ink in your color cartridge.</p> <p>Note: This option is not available if a black cartridge is not installed.</p>


Paper Setup tab

From:	Select:
Type	Plain Paper, Envelope, Banner, Coated Paper, Photo/Glossy Paper, Transparency, Iron-On Transfer, or Card Stock.
Paper Size	A size specific to your paper type. If your paper size is not listed, select Custom Size . For help, see "Printing on custom size paper" on page 40.
Orientation	Portrait or Landscape.

Print Layout tab

From:	Select:
Layout	Normal, Banner, Mirror, N-up, Poster, or Booklet.
Duplexing	<ul style="list-style-type: none"> • Two-Sided to print your document on both sides of the page. • Side Flip or Top Flip to set which way the pages of your finished documents turn. <p>Note: If you select Side Flip, the pages of your document turn like the pages of a magazine. If you select Top Flip, the pages turn like the pages of a legal pad.</p>

Lexmark Solution Center

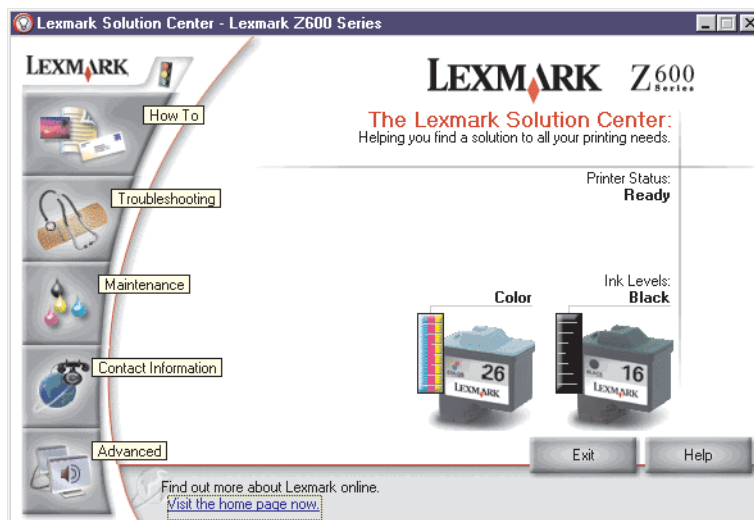

The Lexmark Z600 Series Solution Center (LSC) is a guide you can refer to for printer help.

There are two ways to open the LSC:

- Click **Start** ► **Programs** ► **Lexmark Z600 Series** ► **Lexmark Z600 Series Solution Center**.
- Double-click the **Lexmark Z600 Series Solution Center** desktop icon.

The following table describes the LSC tabs:

From this tab:	You can:
How To	<ul style="list-style-type: none"> • Receive printer information. • Receive basic printing tips. • Receive printing project information.
Troubleshooting	<ul style="list-style-type: none"> • View tips for your printer status. • View common troubleshooting topics.
Maintenance	<ul style="list-style-type: none"> • Install a print cartridge. • View information about how to purchase new cartridges. • Clean the print cartridge nozzles. • Align the cartridges. • Solve other problems. <p>Note: Do not access this tab while a job is in progress.</p>
Contact Information	<ul style="list-style-type: none"> • View information about ordering supplies. • Receive contact information for Lexmark Customer Support. • Register your printer. • Receive a printer software update. • Find out about special offers.
Advanced	<ul style="list-style-type: none"> • Change printing status appearance options. • Download the latest software files from the World Wide Web.

2


Printing ideas

Printing on plain paper


You can load up to 100 sheets of plain paper at a time, depending on the thickness of the paper.

Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

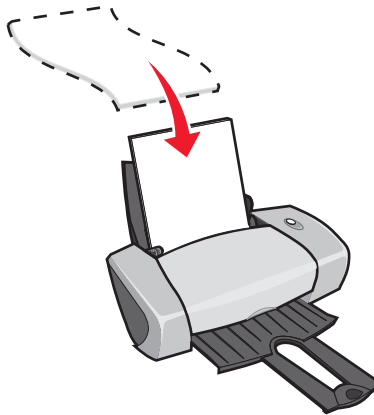

- Do not force the paper into the printer.
- Squeeze and slide the paper guide to the left side of the paper.

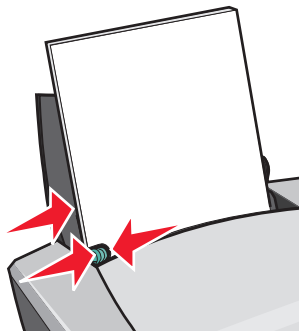

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

If you are using plain A4 or letter size paper, and you want to print with normal print quality, you do not need to adjust the settings.

If you are using specialty media, follow the steps for your paper type.

Step 3: Print your document


Click **OK**.

Printing photos

You can load up to 50 sheets of coated, photo, or glossy paper at a time, depending on the thickness of the paper. You may want to print on plain paper before loading your photo paper and changing your settings. To print on photo cards, see “Printing cards” on page 17.


Step 1: Load the photo paper

- For best results, use photo paper that is made for inkjet printers.
- If your paper includes instructions, read them carefully.
- Load the photo paper vertically against the right side of the paper support.

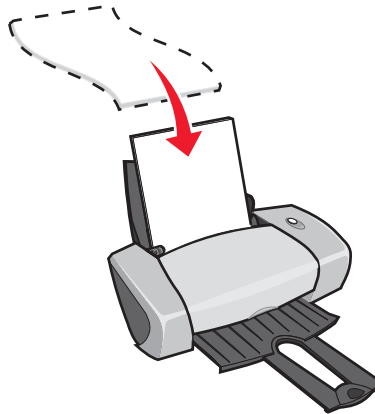

- Make sure the glossy or coated side is facing you.
- Do not force the paper into the printer.

- Squeeze and slide the paper guide to the left side of the photo paper.

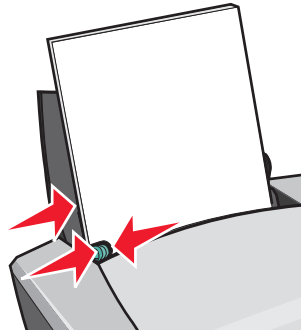

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** Select a print quality:
 - a** From Print Properties dialog box, select the **Quality/Copies** tab.
 - b** From the Quality/Speed area, select **Better** or **Best**.

Note: Higher print quality settings result in better quality documents, but may take longer to print.

- 4** Select a paper type:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Type area, select **Photo/Glossy Paper** or **Coated Paper**.
- 5** Select a paper size:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Paper Size menu, select the correct size. For more information about printing on custom size paper, see “Printing on custom size paper” on page 40.
- 6** Click **OK**.

Step 3: Print your photos

Click **OK**.


Note: To prevent smudging, remove each photo as it exits the printer, and then let it dry before stacking.

Printing on premium or coated paper

You can load up to 100 pages of premium paper at a time, depending on the thickness of the paper.


Step 1: Load the premium or coated paper

- If your paper includes instructions, read them carefully.
- Load the premium paper vertically against the right side of the paper support.

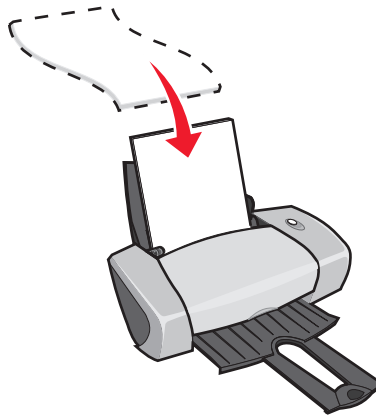

- If there is a special mark on the paper, make sure the mark is facing away from you.
- Do not force the paper into the printer.

Note: Squeeze and slide the paper guide to the left side of the paper. If you are using letter

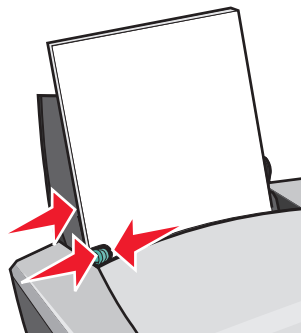

size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File ▶ Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties, Preferences, or Options**.
- 3** Select a print quality:
 - a** From Print Properties dialog box, select the **Quality/Copies** tab.
 - b** From the Quality/Speed area, select **Better** or **Best**.

Note: Higher print quality settings result in better quality documents, but may take longer to print.

- 4** Select a paper type:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Type area, select **Plain Paper**.
- 5** Select a paper size:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Paper Size menu, select the correct size. For more information about printing on custom size paper, see “Printing on custom size paper” on page 40.
- 6** Click **OK**.

Step 3: Print your document

Click **OK**.


Note: The paper exit tray holds up to 25 sheets of premium paper. If you want to print more than 25 pages, remove the first 25 sheet, before you continue printing.

Printing on both sides of a sheet of paper


You can conserve paper by printing on both sides. Load up to 100 sheets of paper at a time, depending on the thickness of the paper.

Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

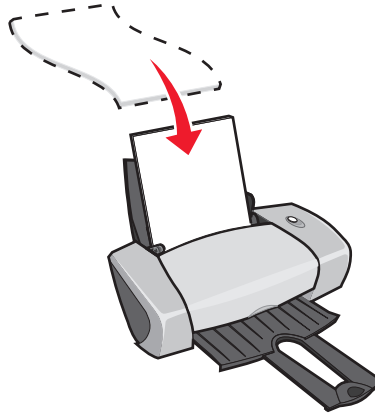

- Do not force the paper into the printer.
- Make sure the print side is facing you.
- Squeeze and slide the paper guide to the left side of the paper.

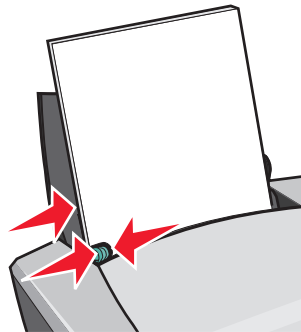

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Note: For the best print quality, use a heavier weight paper.

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.

- 3** Print on both sides of the page:
 - a** From Print Properties dialog box, select the **Print Layout** tab.
 - b** From the Duplexing area, select **Two-Sided**.
 - c** Select **Side Flip** or **Top Flip**.

If you select **Side Flip**, the pages of your document turn like the pages of a magazine. If you select **Top Flip**, the pages turn like the pages of a legal pad.


- d** Check the steps for your paper type to further customize your document.
- e** Click **OK**.

Step 3: Print your document

Click **OK**.

The odd-numbered pages print first, along with a reloading instruction page. When the odd-numbered pages finish printing, the printer software prompts you to reload the paper.

- 1** Load the stack of paper and reloading instruction page with the printed side facing away from you and the arrows pointing down into the paper support.

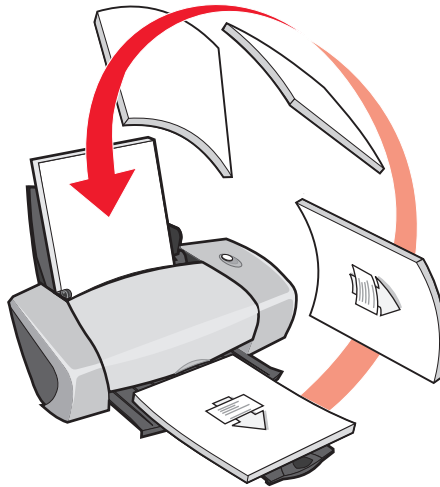

- 2** Click **Continue Printing**.

The even-numbered pages print.

If you do not want to print the reloading instruction page:


- a** From Print Properties dialog box, click **Options** ▶ **Style Options**.
- b** Clear the **Print Instruction page to assist in reloading** check box.
- c** Click **OK**.

Printing cards


You can load up to 25 greeting cards, index cards, photo cards, or postcards at a time, depending on the thickness of the cards.

Step 1: Load the cards

- If your cards include instructions, read them carefully.
- Load the cards vertically against the right side of the paper support.

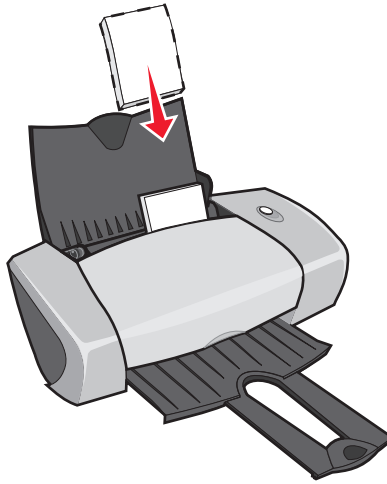

- Make sure the print side is facing you.
- Do not force the cards into the printer.
- Squeeze and slide the paper guide to the left side of the cards.

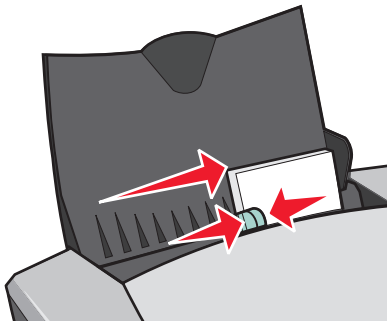

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.

- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3 Select a print quality:
 - a From Print Properties dialog box, select the **Quality/Copies** tab.
 - b From the Quality/Speed area, select **Better** or **Best** if you are printing on photo cards or greeting cards. Select **Normal** for other types of cards.
- 4 Select a paper type:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Type area, select **Card Stock**.
- 5 Select a paper size:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Paper Size menu, select the correct size. For more information about printing on custom size paper, see “Printing on custom size paper” on page 40.
- 6 Click **OK**.

Step 3: Print your cards

Click **OK**.


Printing envelopes

You can load up to 10 envelopes at a time, depending on the thickness of the envelopes.


Step 1: Load the envelopes

Note: Do not use envelopes with holes, windows, deep embossing, metal clasps, string ties, or folding bars.

- Load the envelopes vertically against the right side of the paper support.

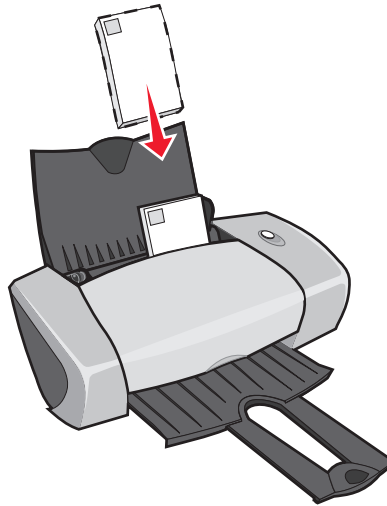

- Make sure the print side is facing you.
- Make sure the stamp location is in the upper left corner.
- Do not force the envelopes into the printer.
- Squeeze and slide the paper guide to the left side of the envelopes.

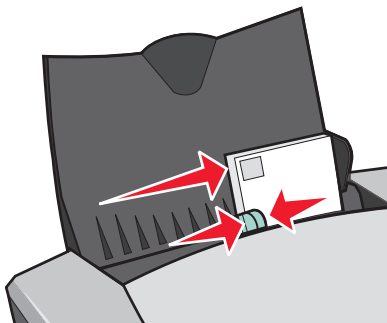

Step 2: Customize the print settings

- 1** With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** Select a paper type:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Type area, select **Envelope**.

- 4 Select an envelope size:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Envelope Size menu, select the correct size. For more information about printing on custom size paper, see “Printing on custom size paper” on page 40.
- 5 Select the orientation:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Orientation area, select **Landscape**.
- 6 Click **OK**.

Note: Many software programs are designed to override the settings in Paper Setup. Make sure landscape orientation is selected in your software program.

Step 3: Print your envelopes

Click **OK**.

Note: The paper exit tray holds up to 10 envelopes. If you want to print more than 10 envelopes, remove the first 10 from the paper exit tray before the others print.


Printing color images in black and white

You can load up to 100 sheets of paper at a time, depending on the thickness of the paper.

Printing color images in black helps to conserve ink in your color print cartridge.


Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

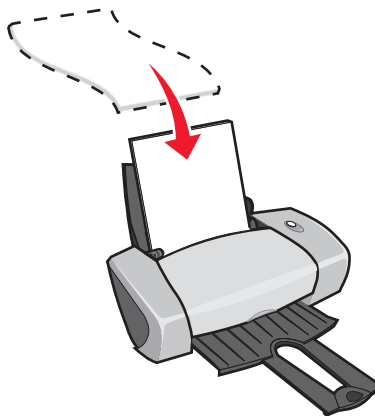

- Make sure the print side is facing you.

- Do not force the paper into the printer.
- Squeeze and slide the paper guide to the left side of the paper.

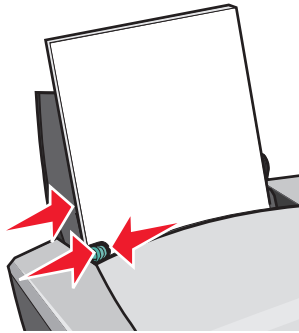

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** To print color images in black and white:
 - a** From Print Properties dialog box, select the **Quality/Copies** tab.
 - b** Select **Print Color Images in Black and White**.
 - c** Click **OK**.
- 4** Further customize your document following the steps for your paper type.

Step 3: Print your document

Click **OK**.

Note: The paper exit tray holds up to 50 sheets of plain paper. If you want to print more, remove the first 50 sheets from the paper exit tray before the others print.


Printing a booklet




You can print and bundle your document to make a booklet. You can load up to 100 sheets of paper at a time, depending on the thickness of the paper.

Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

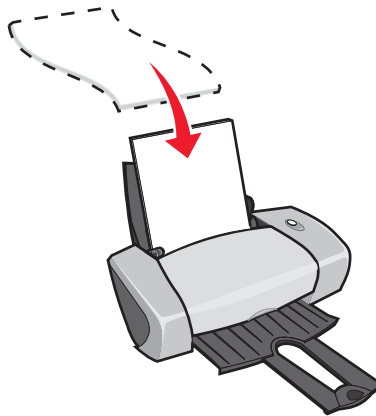

- Make sure the print side is facing you.
- Do not force the paper into the printer.
- Squeeze and slide the paper guide to the left side of the paper.

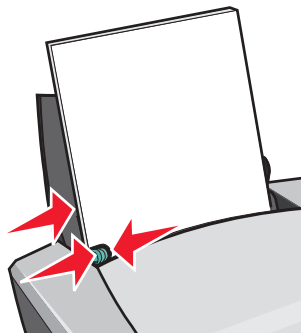

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File ▶ Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties, Preferences, or Options**.
- 3** Select a paper size:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Paper Size menu, select **A4** or **Letter**.
- 4** Select a print layout:
 - a** From Print Properties dialog box, select the **Print Layout** tab.
 - b** From the Layout area, select **Booklet**.
- 5** Enter the number of sheets per bundle.

Note: A bundle is a group of pages that are folded in half and stacked before binding. Very thick bundles may not fold well, so if you are printing with thick paper, use fewer printed sheets per bundle.


- a** From Print Properties dialog box, click **Options ▶ Style Options**.
 - b** Enter the number of sheets you want in each bundle and then click **OK**.
- 6** Click **OK** to close the Print Properties dialog box.

Step 3: Print your document

Click **OK**.

After the first half of your booklet and the reloading instruction page prints, your printer software prompts you to reload the paper.

- 1 Insert the stack of paper and the reloading instruction page with the printed side facing away from you and the arrows pointing down into the paper support.

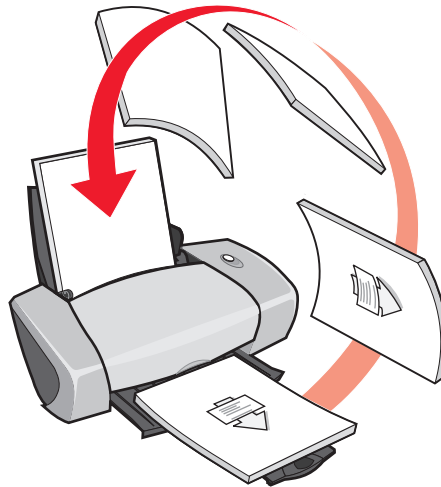

- 2 Click **Continue Printing**.

If you do not want to print the reloading instruction page:


- 1 From Print Properties dialog box, click **Options** ▶ **Style Options**.
- 2 Clear the **Print instruction page to assist in reloading** check box.
- 3 Click **OK**.

Step 4: Build your booklet

After your document prints, stack the bundles together and bind your booklet.

To build your booklet:

- 1 Remove the first bundle from the paper exit tray, fold it in half, and set it aside.
- 2 Remove the next bundle, fold it in half, and then stack it on top of the first bundle.

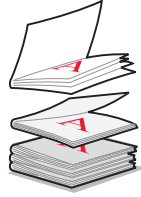

- 3 Continue to stack the bundles on top of each other until your booklet is complete.
- 4 Bind the bundles to complete your booklet.




Printing labels

You can load up to 25 sheets of labels at a time, depending on the thickness of the sheets.


Step 1: Load the labels

- Use labels designed for inkjet printers.
- If your labels include instructions, read them carefully.
- Do not print within 1 mm (0.04 in.) of the edge of a label.
- Load the labels vertically against the right side of the paper support.

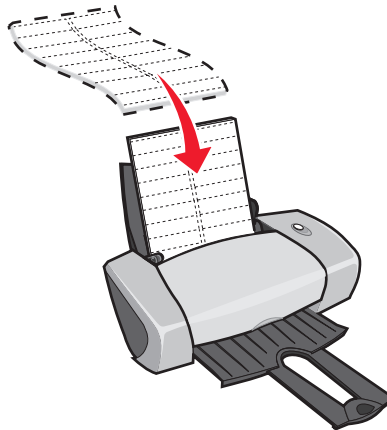

- Make sure there are no missing or curled labels.

- Make sure the print side is facing you.
- Do not force the labels into the printer.
- Squeeze and slide the paper guide to the left side of the labels.

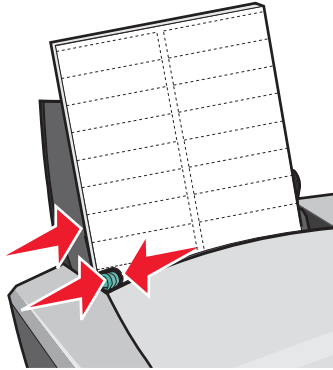

Note: If you are using letter size sheets of labels, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings


- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3 Select a print quality:
 - a From Print Properties dialog box, select the **Quality/Copies** tab.
 - b From the Quality/Speed area, select **Normal**.
- 4 Select a paper type:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Type area, select **Plain Paper**.
- 5 Select a paper size:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Paper Size menu, select the correct size. For more information about printing on custom size paper, see “Printing on custom size paper” on page 40.
- 6 Click **OK**.

Step 3: Print your labels

Click **OK**.

Note: The paper exit tray holds up to 10 sheets of labels. If you want to print more than 10 sheets, remove the first 10 sheets from the paper exit tray before the others print.


Printing handouts

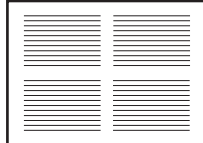

You can conserve paper by printing handouts, or multiple page images, on a single sheet of paper. Load up to 100 sheets of paper at a time, depending on the thickness of the paper.


Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

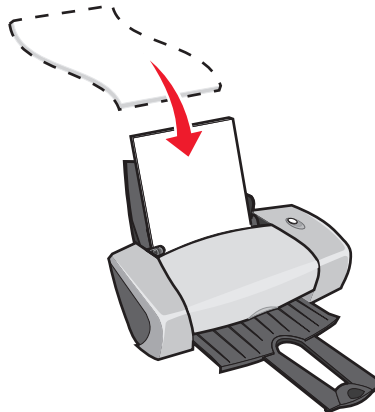

- Make sure the print side is facing you.
- Do not force the paper into the printer.

- Squeeze and slide the paper guide to the left side of the paper.

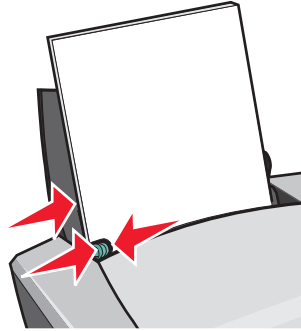

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Note: For the best print quality, use a heavier weight paper.

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.

The Print dialog box appears.

- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.

- 3 Select a print layout:

- a From Print Properties dialog box, select the **Print Layout** tab.

- b From the Layout area, select **N-up**.

- c Select the number of pages (two, three, four, or eight) you want to print on a single sheet of paper.

- d If you want to print a border around each page image, select **Print Page Borders**.

- 4 To print on both sides of the paper:

- a From Print Properties dialog box, select the **Print Layout** tab.

- b From the Duplexing area, select **Two-Sided**.

- c Select **Side Flip** or **Top Flip** binding.

If you select **Side Flip**, the pages of your document turn like the pages of a magazine. If you select **Top Flip**, the pages turn like the pages of a legal pad.

- 5 Click **OK**.


Step 3: Print your handouts

Click **OK**.

If you formatted your handouts to print on one side of the page, you are finished.

If you formatted your handouts to print on both sides of the page, continue printing your handouts.

- 1 After the first half of your handouts prints, your printer software prompts you to reload the paper. Insert the paper and reloading instruction page with the printed side facing away from you and the arrows pointing down into the paper support.

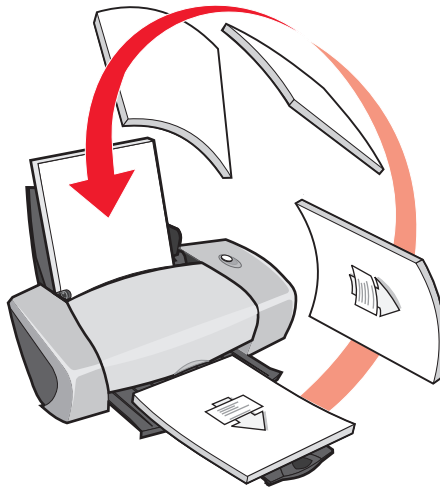


- 2 Click **Continue Printing**.

If you do not want to print the reloading instruction page:

- 1 From Print Properties dialog box, click **Options** ▶ **Style Options**.
- 2 Clear the **Print instruction page to assist in reloading** check box.
- 3 Click **OK**.

Printing a poster

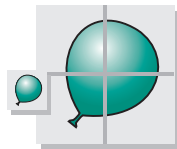


You can enlarge a single page image to print on multiple pages. For example, you can enlarge a photograph to print as a four-, nine-, or 16-page poster.


Print up to 100 sheets of paper at a time, depending on the thickness of the paper.

Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

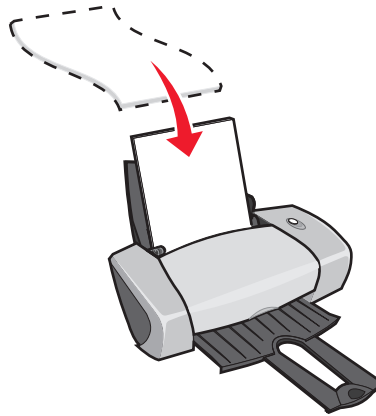

- Make sure the print side is facing you.
- Do not force the paper into the printer.
- Squeeze and slide the paper guide to the left side of the paper.

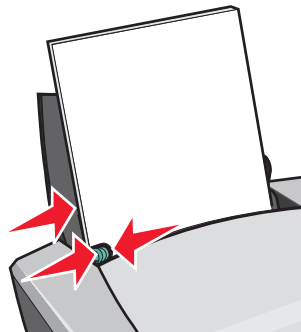

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Note: For the best print quality, use a heavier weight paper.

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**

- 3 Select a print quality:
 - a From Print Properties dialog box, select the **Quality/Copies** tab.
 - b From the Quality/Speed area, select **Normal**.

Note: Higher print quality settings result in better print quality, but may take longer to print.

- 4 Select a print layout:
 - a From Print Properties dialog box, select the **Print Layout** tab.
 - b From the Layout area, select **Poster**.
- 5 Select your poster size:
 - a Select the size of your poster: **2 x 2** (four pages total), **3 x 3** (nine pages total), or **4 x 4** (16 pages total).
 - b Select **Print Crop Marks** if you want help cutting the edges of your pages.

- 6 If you need to reprint a selection of pages:

- a Click **Select Pages To Print...**

The pages that are *not* going to print have a circle and a bar symbol over the number and are shaded. Select or clear each page by clicking it.

- b Click **OK**.

- 7 Click **OK**.


Step 3: Print your poster

Click **OK**.

Assemble your poster


- 1 On each printed page, trim the white edges from two adjacent sides.

For example, trim the white edge from the top and left sides of each page.

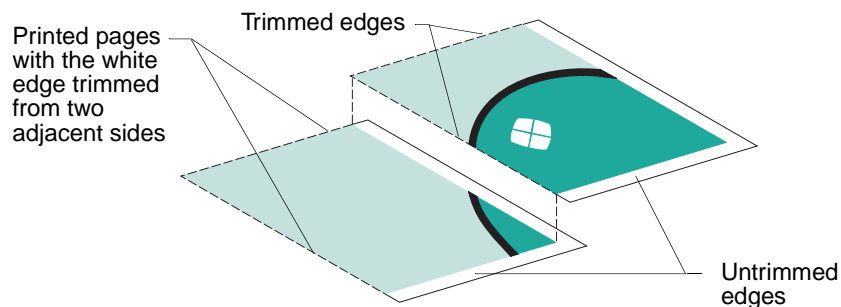

- 2 Arrange the pages so that every trimmed edge overlaps an untrimmed edge (the white edge).
- 3 Tape the backs of the pages together.
- 4 To complete your poster, trim any remaining white edges.

Printing iron-on transfers

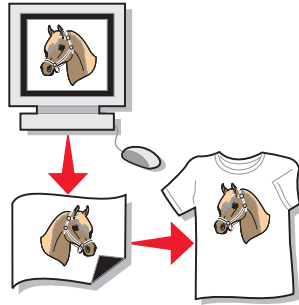


You can load up to 100 iron-on transfers at a time, depending on the thickness of the transfers. You may want to print on plain paper before loading your iron-on transfers.

Note: For best results, load one iron-on transfer at a time.


Step 1: Load the iron-on transfers

- If your iron-on transfers include instructions, read them carefully.
- Load the iron-on transfers vertically against the right side of the paper support.

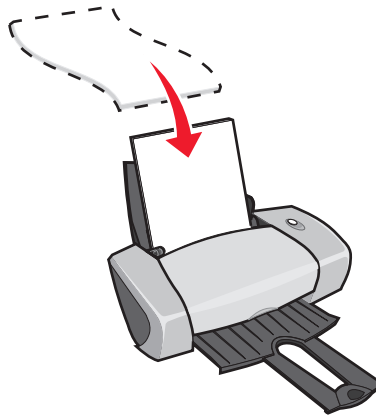

- Make sure the print side (blank side) is facing you.
- Do not force the iron-on transfers into the printer.

- Squeeze and slide the paper guide to the left side of the iron-on transfers.

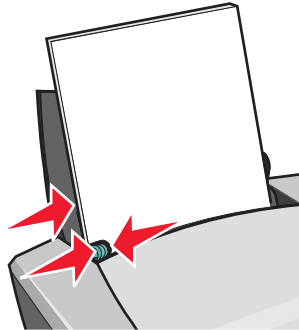

Note: If you are using letter size iron-on transfers, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File** ► **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** Select a print quality:
 - a** From Print Properties dialog box, select the **Quality/Copies** tab.
 - b** From the Quality/Speed area, select **Normal** or **Better**.
- 4** Select a paper type:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Type area, select **Iron-on Transfer**.
- 5** If your software program does not have mirror or iron-on settings, select a print layout:
 - a** From Print Properties dialog box, select the **Print Layout** tab.
 - b** From the Layout area, select **Mirror**.
- 6** Click **OK**.

Step 3: Print your iron-on transfer

Click **OK**.


Note: To prevent smudging, remove each iron-on transfer as it exits the printer, and then let it dry before stacking.

Printing transparencies


You can load up to 50 transparencies at a time, depending on the thickness of the transparencies.

Step 1: Load the transparencies

- Use transparencies designed for inkjet printers.
- If your transparencies include instructions, read them carefully.
- Load the transparencies vertically against the right side of the paper support.

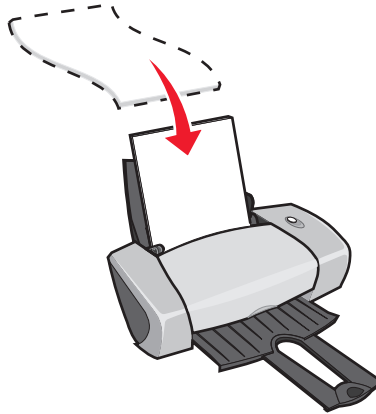

- Make sure the rough side (print side) of the transparencies is facing you. If the transparencies have a removable stripe, make sure each stripe is facing away from you and down toward the printer.
- Do not force the transparencies into the printer.
- Squeeze and slide the paper guide to the left side of the transparencies.

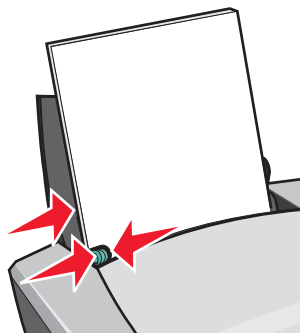

Note: If you are using letter size transparencies, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1** With your document open, click **File ▶ Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties, Preferences, or Options**.
- 3** Select a print quality:
 - a** From Print Properties dialog box, select the **Quality/Copies** tab.
 - b** From the Quality/Speed area, select **Normal**.
- 4** Select a paper type:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Type area, select **Transparency**.
- 5** Select a paper size:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Paper Size menu, select **A4** or **Letter**.
- 6** Click **OK**.

Step 3: Print your transparencies

Click **OK**.


Note: To prevent smudging, remove each transparency as it exits the printer, and then let it dry before stacking.

Printing your document in reverse order


You can load up to 100 sheets of paper at a time, depending on the thickness of the paper.

Step 1: Load the paper

- Load the paper vertically against the right side of the paper support.

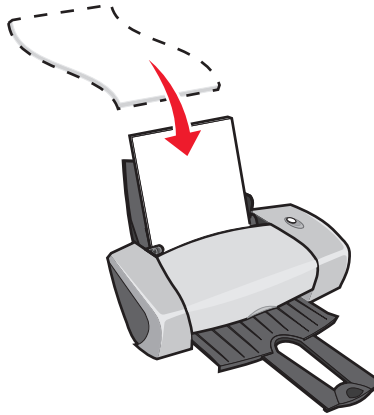

- Make sure the print side is facing you.
- Do not force the paper into the printer.
- Squeeze and slide the paper guide to the left side of the paper.

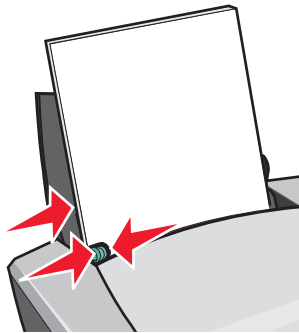

Note: If you are using letter size paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.

- 3 To print the last page first:
 - a From Print Properties dialog box, select the **Quality/Copies** tab.
 - b Select **Print Last Page First**.
- 4 Follow the steps for your paper type to further customize your document.
- 5 Click **OK**.

Step 3: Print your document

Click **OK**.


Note: The paper exit tray holds up to 25 sheets of plain paper. If you want to print more, remove the first 25 sheets from the paper exit tray before the others print.

Printing a banner

You can load up to 20 sheets of banner paper at a time.


Step 1: Load the banner paper

- 1 Remove any paper from the printer.

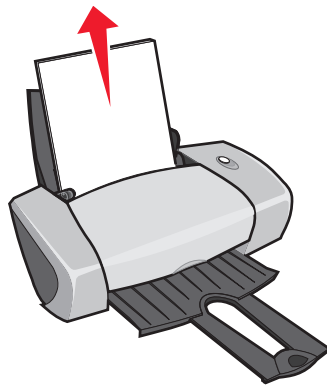


- 2 Place a stack of banner paper with *only* the number of sheets you need to print your banner behind the printer.

Note: Loading excess banner paper may cause a paper jam. For help, see “Printer has a paper jam” on page 57.

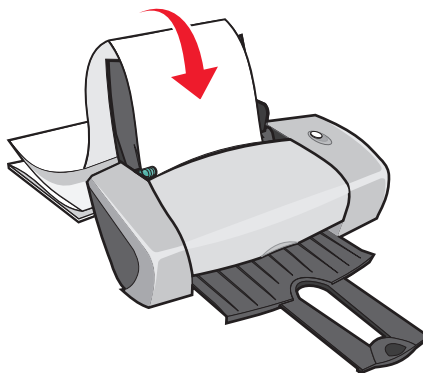

- 3 Load the leading edge of the banner paper into the printer against the right side of the paper support.

- 4 Squeeze and slide the paper guide to the left edge of the banner paper.

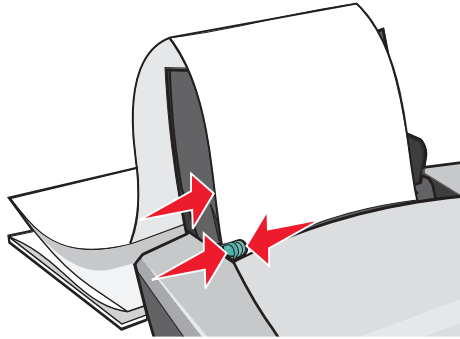

Note: If you are using letter size banner paper, adjusting the paper guide may not be necessary.

Step 2: Customize the print settings

- 1 With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3 Select a print quality:
 - a From Print Properties dialog box, select the **Quality/Copies** tab.
 - b From the Quality/Speed area, select **Normal**.
- 4 Select a paper type:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Type area, select **Banner**.

Note: If you do not select Banner as the Type, your banner paper will cause a paper jam.
For help, see “Printer has a paper jam” on page 57.

- 5 Select a banner size:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Banner Size menu, select **A4** or **Letter**.
- 6 Select the orientation:
 - a From Print Properties dialog box, select the **Paper Setup** tab.
 - b From the Orientation area, select **Portrait** or **Landscape**.

- 7 Select a print layout:
 - a From Print Properties dialog box, select the **Print Layout** tab.
 - b From the Layout area, select **Banner**.
- 8 Click **OK**.

Step 3: Print your banner


Click **OK**.

Printing on custom size paper

You can load up to 100 sheets of custom size paper at a time, depending on the thickness of the paper.


Step 1: Load the custom size paper

- Make sure your paper size fits within these dimensions:
 - Width: 76 to 216 mm (3 to 8.5 in.)
 - Length: 127 to 432 mm (5 to 17 in.)
- Load the paper vertically against the right side of the paper support.

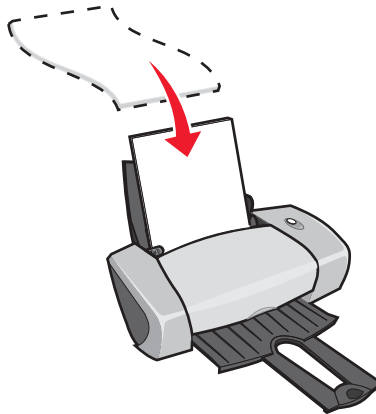

- Make sure the print side is facing you.
- Do not force the paper into the printer.

- Squeeze and slide the paper guide to the left side of the paper.

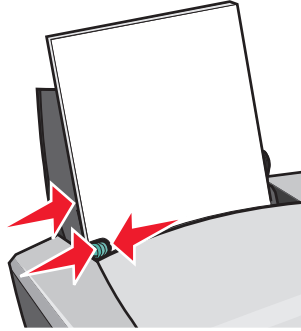

Step 2: Customize the print settings

- 1** With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** Create a custom paper size:
 - a** From Print Properties dialog box, select the **Paper Setup** tab.
 - b** From the Paper Size menu, select **Custom Size**.
A dialog box displays on the screen.
 - c** From the Units area, select **Millimeters** or **Inches**.
 - d** Type the dimensions for your custom paper size.
 - e** Click **OK**.
- 4** Continue to customize your document based on your paper type.

Step 3: Print your document

Click **OK**.

3

Maintenance

Replacing the print cartridges

The Lexmark Z600 Series uses the following cartridges:


Item:	Part number:
Color cartridge	26 or 27
Black cartridge	16 or 17

Note: You can use the printer with just a color cartridge or just a black cartridge.

For information about ordering supplies, see page 48.


Removing the used cartridges

- 1 Make sure the power light is on.
- 2 Raise the front cover.

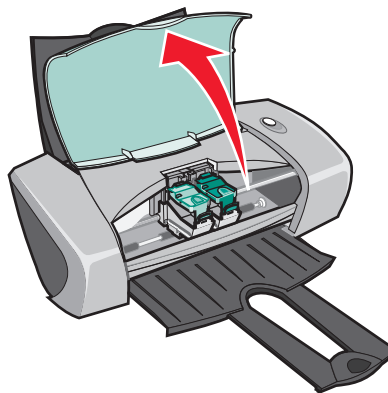


The cartridge carrier moves to the loading position, unless the printer is busy.

- 3 Squeeze the tabs on the cartridge lids, then lift the lids.

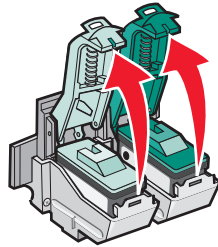


- 4 Remove the used cartridges. Store them in an airtight container or dispose of them properly.

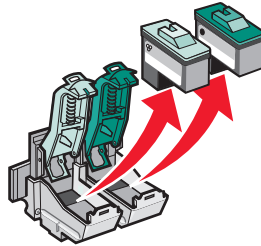


Installing the cartridges

- 1 If you are installing new cartridges, remove the sticker and transparent tape from the back and bottom of the cartridges.

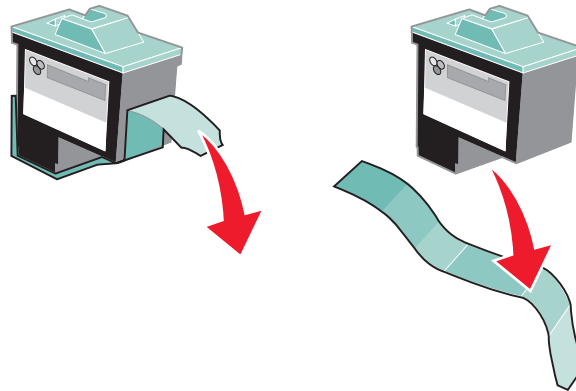


Warning: Do *not* touch or remove the gold contact areas on the back and bottom of the cartridges.

- 2 Insert the color cartridge in the left carrier. Insert the black cartridge in the right carrier.

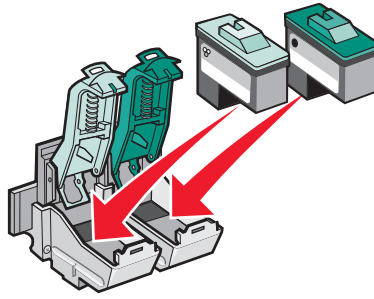


Note: To extend the life of your color cartridge and improve printing speed, install a black cartridge along with the color cartridge.

- 3 Snap the lids closed.

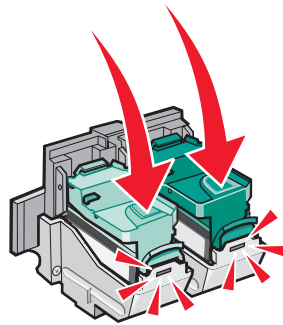

- 4 Close the front cover.

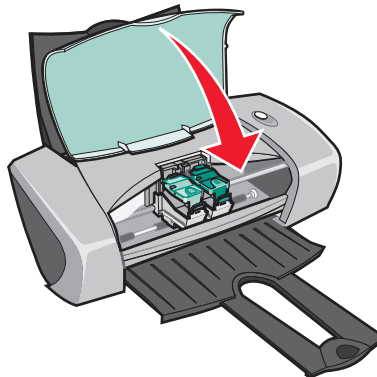

Note: The front cover must be closed to start a print job.

Specifying cartridge settings in the printer software

Before you specify the print cartridge settings in the printer software, install the cartridges. For help, see “Installing the cartridges” on page 43.

- 1 Open the LSC. For help, see “Lexmark Solution Center” on page 8.
- 2 From the Maintenance tab, click **Install a new print cartridge**.
- 3 Select the type of cartridge you installed.

Note: Specify whether the cartridge is a new cartridge or an old cartridge (one that has been used before). If an old cartridge is incorrectly identified as New Cartridge in the Lexmark Solution Center, ink levels may be incorrect.

- 4 Click **OK** or **Next**.
- 5 If you installed a new cartridge, continue with “Aligning the print cartridges.”

Aligning the print cartridges

Typically, you only align print cartridges after installing or replacing a cartridge. However, you may also need to align cartridges when:

- Characters are not properly formed or are not aligned at the left margin.
- Vertical, straight lines are wavy.

To align the cartridges:

- 1 Load plain paper.
- 2 Open the Lexmark Solution Center. For help, see page 8.
- 3 From the Maintenance tab, click **Align to fix the blurry edges**.
- 4 Click **Print**.

The Alignment page prints.

- 5 Find the number under the darkest arrow for each alignment group.
- 6 Use the up and down arrows in the Align Cartridges dialog box to select the number that matches the darkest arrow on the printed page for each alignment group.
- 7 Click **OK**.

If the alignment page does not print, make sure you have completely removed the sticker and transparent tape from both cartridges. For help, see “Installing the cartridges” on page 43.

Improving print quality


If you are not satisfied with the print quality of your document, make sure you:

- Use the appropriate paper for the document. For example, use photo paper if you are printing a photo.
- Use paper that is a heavier weight, bright white, or coated.
- Select a higher print quality:
 - 1 From your software program, click **File** ▶ **Print**.
The Print dialog box appears.
 - 2 From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
 - 3 From the Quality/Speed area, select **Better** or **Best**.


If your document still does not have the print quality you want, follow these steps:

- 1 Reinsert the print cartridges:
 - a Remove the print cartridges. For help, see “Removing the used cartridges” on page 42.
 - b Insert the print cartridges. For help, see “Installing the cartridges” on page 43.
 - c Print your document again.
 - d If print quality has not improved, continue with step 2.
- 2 Clean the print nozzles:
 - a Load paper. For help, see “Step 1: Load the paper” on page 10.
 - b Open the Lexmark Solution Center. For help, see page 8.
 - c Click the **Maintenance** tab.
 - d From the Maintenance tab, click **Clean to fix horizontal streaks**.
 - e Click **Print**.
A nozzle page prints, forcing ink through the nozzles to clean the clogged nozzles.
 - f Print your document again to verify that your print quality has improved.
 - g If you are not satisfied with your print quality, continue with step 3, and then print your document again.
- 3 Wipe the print cartridge nozzles and contacts:
 - a Remove the print cartridges. For help, see “Removing the used cartridges” on page 42.
 - b Dampen a clean, lint-free cloth with water.

- c** Gently hold the cloth against the nozzles for about three seconds, and then wipe in the direction shown.

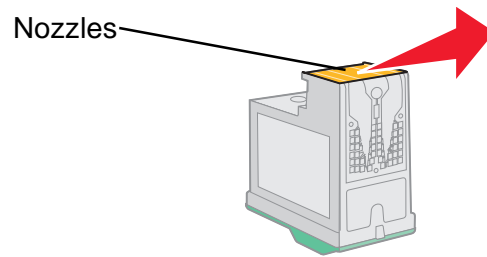

- d** Using another clean section of the cloth, gently hold the cloth against the contacts for about three seconds, and then wipe in the direction shown.

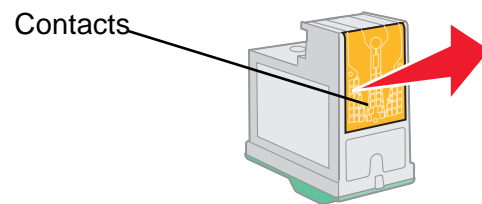

- e** With another clean section of the cloth, repeat step c through d.
- f** Allow the nozzles and contacts to dry completely.
- g** Reinsert the print cartridges.
- h** Print your document again.
- i** If the print quality does not improve, repeat step 3 up to two more times.
- j** If print quality is still not satisfactory, replace the print cartridges. For information, see "Ordering supplies" on page 48.

Preserving the print cartridges

To ensure the longest life from your print cartridges and optimum performance from your printer:

- Keep a new cartridge in its packaging until you are ready to install it.
- Do not remove a print cartridge from the printer except to replace, clean, or store it in an airtight container. The print cartridges do not print correctly if left exposed for an extended period.

Lexmark's printer warranty does not cover repair of failures or damage caused by a refilled cartridge. We do not recommend use of refilled cartridges. Refilling cartridges can affect print quality and cause damage to the printer. For best results, use Lexmark supplies.

Ordering supplies

To order supplies or locate a dealer near you, contact the Lexmark Web site at www.lexmark.com.

Item:	Part number:
Black cartridge	16 or 17
Color cartridge	26 or 27
USB cable	12A2405

4

Setup troubleshooting

Troubleshooting checklist

- Is the power supply firmly attached to your printer and a properly grounded electrical outlet?
- Are both your printer and computer on?
- Is your USB cable securely attached to your printer and to your computer or Lexmark adapter?
- Are any printer lights blinking? For help, see “Understanding error messages and flashing lights” on page 53.
- Did you remove the sticker and transparent tape from the back and bottom of both print cartridges?
- Did you install the print cartridges correctly? For help, see “Installing the cartridges” on page 43.
- Is the paper loaded correctly? Make sure you do not push the paper too far into the printer. For help, see page 10.
- Did you install the printer software correctly?

From your desktop, click **Start ▶ Programs** or **All Programs**.

If Lexmark Z600 Series does not appear in your list of programs, install the printer software.

- Is the printer set as the default printer?

To set the printer to be the default printer:

- 1 Click **Start** ▶ **Settings** ▶ **Printers**
- 2 Right-click the **Lexmark Z600 Series** and make sure that **Set as Default** is selected.

- Is your printer connected directly to your computer? If it is connected through an external device, such as a USB hub, switch box, scanner, or fax machine, follow these steps:

- 1 Disconnect your printer from any external devices.
- 2 Connect your printer directly to your computer with a USB cable.
- 3 Follow these instructions to print a test page.
 - a Open the Lexmark Solution Center. For help, see page 8.
 - b From the Maintenance tab, click **Print a Test Page**.
 - If the test page prints, the problem may be with your external devices, not your printer. Check the documentation that came with your external devices for help.
 - If the test page does not print, refer to the printer software Help for further troubleshooting information.

Solving printer software installation problems


If the printer software does not install properly, a communications error message appears when you try to print. You may need to remove the printer software, and then reinstall it.

When I insert the printer software CD, nothing happens.


- 1 Close all open software programs.
- 2 Restart your computer.

- 3 Click **Cancel** on all screens similar to the following that appear.

Windows 98/Me

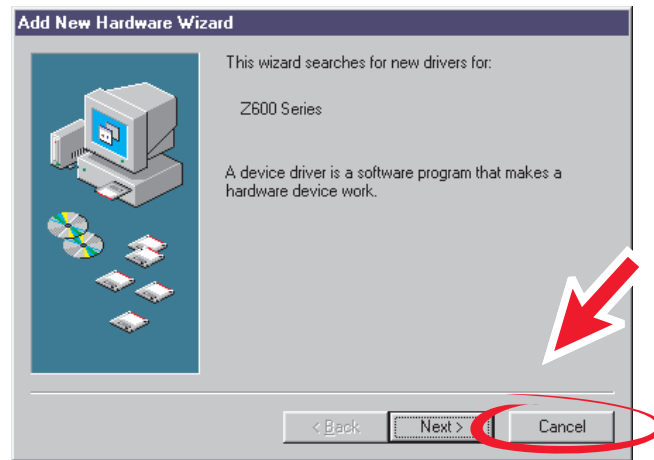

Windows 2000/XP

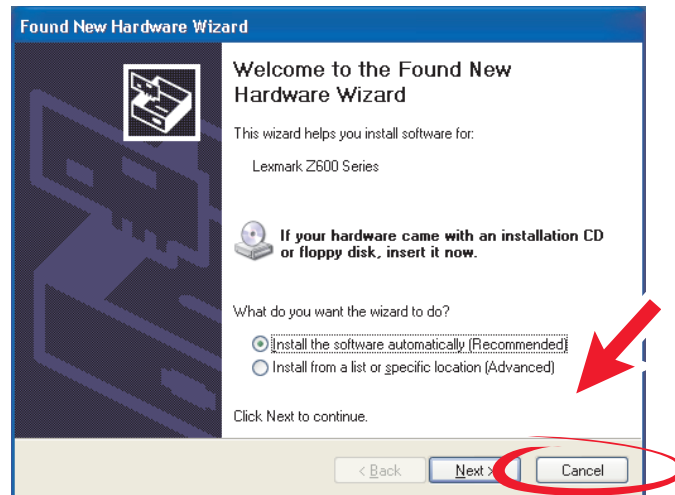

- 4 Eject and reinsert the printer software CD.
- 5 From your desktop, double-click **My Computer**.
- 6 Double-click your **CD-ROM drive icon**. If necessary, double-click **setup.exe**.
- 7 Follow the instructions on your screen to complete printer software installation.

Removing the printer software

- 1** From your desktop, click **Start ▶ Programs ▶ Lexmark Z600 Series ▶ Lexmark Z600 Series Uninstall**.
- 2** Follow the instructions on your screen to remove the printer software.
- 3** Restart the computer before reinstalling the printer software.

Installing the printer software

You can install the printer software using the printer software CD that came with your printer, or you can download it from the Lexmark Web site at www.lexmark.com.

Using the CD that came with your printer

- 1** Close all open software programs.
- 2** When your desktop appears, insert the printer software CD.
The Lexmark Installer screen appears.
- 3** Click **Install**.
- 4** Follow instructions on your screen to complete printer software installation.
A printer icon is automatically created on your desktop.

Using the World Wide Web

- 1** From the Lexmark Web site, www.lexmark.com, select the appropriate driver for your operating system.
- 2** Follow the instructions on your screen to install the printer software.

5

General troubleshooting

For information about:	See page:
Understanding error messages and flashing lights	53
Resolving unsuccessful or slow printing	54
Clearing paper misfeeds or jams	56
Solving print quality problems	58
Solving specialty media problems	60

Understanding error messages and flashing lights

Use this section to understand printer software error messages on your computer screen and a blinking light on your printer. For information about lights on a Lexmark adapter, refer to the adapter documentation.

Paper Jam message

For help clearing a paper jam, see “Printer has a paper jam” on page 57.

Ink Low message

A print cartridge is running out of ink. An Ink Low message appears when one of your cartridges is 25% full or less.


When this message appears you can:

- Click **OK**.
- Click the **?** to get more information about ordering supplies.
- Order a new cartridge or locate a dealer near you by contacting the Lexmark Web site at www.lexmark.com.

For help:

- Installing a new cartridge, see “Installing the cartridges” on page 43.
- Ordering supplies, see “Ordering supplies” on page 48.

The Power/Resume button is blinking

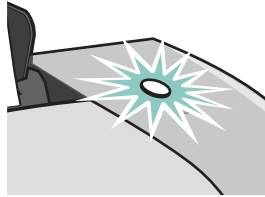

Check your computer screen for error messages.

- If the printer is out of paper:
 - 1 Load paper.
 - 2 Press the button.
- If the printer has a paper jam, see “Printer has a paper jam” on page 57.

Resolving unsuccessful or slow printing

The following topics can help you improve unsuccessful or slow printing.

Printer is plugged in, but does not print

For help, first see the troubleshooting checklist on page 49, and then:

Check the printer status:

Windows 98/Me/2000	Windows XP
<ol style="list-style-type: none">1 Click Start ▶ Settings ▶ Printers.2 From the Printers folder, double-click the Lexmark Z600 Series printer icon.3 From the Printer menu, make sure:<ul style="list-style-type: none">• Set as Default is selected.• Pause Printing is not selected.	<ol style="list-style-type: none">1 Click Start ▶ Control Panel.2 Click Printers and Other Hardware.3 Click View installed printers or fax printers.4 From the Printers folder, make sure there is a check next to the Lexmark Z600 Series printer icon (indicating that it is the default printer). If there is no check, right-click the icon, and then click Set as Default Printer.5 From the Printer menu, make sure that Pause Printing is not selected.

- Check the printer port:

Windows 98/Me	Windows 2000	Windows XP
<ol style="list-style-type: none"> 1 Click Start ▶ Settings ▶ Printers. 2 Right-click the Lexmark Z600 Series printer icon, and then click Properties. 3 Click the Details tab. 4 From the Ports drop-down menu, check the printer port. If the USB port is <i>not</i> listed, remove, and then reinstall the printer software. 5 Click OK. 	<ol style="list-style-type: none"> 1 Click Start ▶ Settings ▶ Printers. 2 Right-click the Lexmark Z600 Series printer icon, and then click Properties. 3 Click the Ports tab. 4 From the list of ports, select USB printer port. If the USB port is <i>not</i> listed, remove, and then reinstall the printer software. 5 Click Apply. 6 Click OK. 	<ol style="list-style-type: none"> 1 Click Start ▶ Control Panel ▶ Printers and Other Hardware ▶ Printers and Faxes. 2 Right-click the Lexmark Z600 Series printer icon, and then click Properties. 3 Click the Ports tab. 4 From the list of ports, select USB printer port or Virtual printer port for USB. If the USB port is <i>not</i> listed, remove, and then reinstall the printer software. 5 Click Apply. 6 Click OK.

- Make sure you have not installed multiple copies of the printer software:
 - 1 **Windows 98/Me/2000:** Click **Start** ▶ **Settings** ▶ **Printers**.
Windows XP: Click **Start** ▶ **Control Panel** ▶ **Printers and Other Hardware** ▶ **Printers and Faxes**.
 - 2 In the **Printers** folder, make sure there is only one **Lexmark Z600 Series** printer icon.
- If you have installed multiple copies of the printer software, remove each copy, and then restart the computer and reinstall the printer software.
- If the printer port is incorrect, remove, and then reinstall the printer software.

After you check these items, print a test page. For help, see page 50.

Test page does not print

For help, first see the troubleshooting checklist on page 49, and then:

- If the paper is jammed, see “Printer has a paper jam” on page 57.
- Try printing your test page again. If it still does not print, see:
 - “Resolving unsuccessful or slow printing” on page 54
 - “Solving printer software installation problems” on page 50

Alignment page does not print

Make sure:

- You completely removed the transparent tape and sticker from the back and bottom of the print cartridges. For help, see “Replacing the print cartridges” on page 42.
- You installed the cartridges correctly. For help, see “Installing the cartridges” on page 43.
- You loaded the paper correctly and did not force the paper into the printer.

Printer ejects a blank page after appearing to print

Make sure:

- You removed the sticker and transparent tape from the back and bottom of the print cartridges. For help, see “Replacing the print cartridges” on page 42.
- Your cartridge does not have clogged nozzles. Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Printer prints very slowly

- Close any software programs not in use.
- Check the document you are printing. Photos and graphics may take longer to print than regular text. Documents that are large or that contain background images may also take longer to print.
- Check the printer to see if another document is being printed. Print jobs are printed in the order the printer receives them.
- Decrease the print quality setting to **Normal** or **Quick Print**.

Note: Higher print quality settings result in better quality documents, but may take longer to print.

Clearing paper misfeeds or jams

The following topics can help you clear paper misfeeds or jams.

Paper misfeeds or multiple sheets feed

Make sure:

- Your paper is recommended for inkjet printers.
- The edges of your paper are not curled.
- A piece of paper from a previous print job is not jammed in the printer.

- You do not load too much paper. Depending on the weight of the paper, you can load up to 100 sheets of plain paper, 10 transparencies or labels, and 10 envelopes or cards.
- You do not force the paper into the printer. For example, letter and A4 paper should extend slightly beyond the top of the paper support.
- The paper guide is against the left edge of the paper.
- The paper guide does not cause the paper to bow.
- The printer is on a flat, level surface.
- The printer settings you have chosen are correct for the type of document you are printing. For help, see “Printing ideas” on page 10.
- The paper is against the right side of the paper support.

Printer does not feed envelopes or specialty media

Make sure:

- Your printer feeds paper without problems. Load the envelopes or specialty media vertically against the right side of the paper support. Squeeze and slide the paper guide to the left edge of the envelopes or specialty media. For help, see “Printing ideas” on page 10.
- You select the appropriate envelope or specialty media size and the appropriate paper type.
- You are using a specialty media or envelope size supported by your printer.
- Your software program is designed to print envelopes. For help, check your software program documentation.
- The envelope or specialty media is not jammed. For help, see “Printer has a paper jam” on page 57.

Printer has a paper jam

If the paper is lodged too far into the printer and cannot be removed:

- 1 Turn the printer off.
- 2 Turn the printer back on.

If the printer does not automatically eject the page:

- a Turn the printer off.
- b Pull firmly on the paper to remove it.

If you cannot reach the paper, raise the front cover, pull the paper out, and then close the front cover.

- c Turn the printer on.

Note: Do not force the paper into the printer.

Solving print quality problems

If print quality is unsatisfactory, you may need to adjust your margin settings, select a higher print quality, align the print cartridges, or clean the nozzles.

The following topics can help you improve an unsatisfactory document.

Print is too dark or smudged

- Make sure the paper is straight and not wrinkled.
- Let the ink dry completely before handling the paper.
- Make sure the paper type and paper size settings in the printer software match the paper loaded in the printer. For help, see “Understanding the printer software” on page 6.
- Make sure the print quality setting is appropriate for the paper type.
- Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Vertical straight lines are not smooth

To improve the print quality of vertical straight lines in tables, borders, and graphs:

- Select a higher print quality.
- Align the print cartridges. For help, see “Aligning the print cartridges” on page 45.
- Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Print smears on the page

- The next page exiting the printer may be smearing the ink. Remove each page as it exits the printer and let it dry completely before stacking.
- Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Printed pages have alternating bands of light and dark print (intermittent printing)

Select a higher print quality. For help, see “Understanding the printer software” on page 6.

Characters are missing or unexpected

Like other printers, your printer cannot print on the extreme edges of the paper. Your margins must fall within these settings:

Margin:	Minimum setting:
Left and right	<ul style="list-style-type: none">• 6.35 mm (0.25 in.) for U.S. Letter, U.S. Legal, Banner Letter, and custom paper sizes• 3.175 mm (0.125 in.) for envelopes• 3.37 mm (0.13 in.) for most paper sizes
Top	<ul style="list-style-type: none">• 1.7 mm (0.067 in.)
Bottom	<ul style="list-style-type: none">• 12.7 mm (0.5 in.) for black print jobs• 19 mm (0.75 in.) recommended for color print jobs

Printed characters are improperly formed or misaligned

- Cancel all print jobs and print your job again. To cancel all print jobs:
 - a** Click **Start** ▶ **Settings** ▶ **Printers**.
 - b** Double-click your **printer icon**.
 - c** Select the document you want to cancel.
 - d** From the **Document menu**, click **Cancel**.
- Repeat steps c through d for all the documents you want to cancel.
- Align the print cartridges. For help, see “Aligning the print cartridges” on page 45.
- Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Colors on the printout differ from the colors on the screen

- A cartridge may be low on ink. Check the ink levels in the Lexmark Solution Center. For help, see “Lexmark Solution Center” on page 8.
- Use a different paper brand. Each paper brand accepts ink differently and prints with color variations.

Select Natural Color as the document color:

- 1** With your document open, click **File** ▶ **Print**.
The Print dialog box appears.
- 2** From the Print dialog box, click **Properties**, **Preferences**, or **Options**.
- 3** Click **Options** ▶ **Quality Options**.

- 4 Click **Select color settings manually**.
- 5 Select **Natural Color**.

Colors on the printout are faded

Try the suggestions listed in the section “Colors on the printout differ from the colors on the screen” on page 59. If the colors still seem faded, clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.

Photos do not print as expected

- Use a photo paper designed for inkjet printers.
- Select a higher print quality.
- Select photo paper as the paper type.

Solving specialty media problems

The following topics can help solve problems with specialty media.

Glossy or photo papers or transparencies stick together

- Load one sheet of photo paper or transparencies at a time.
- Use a photo paper or transparency designed for inkjet printers.
- Make sure you loaded the paper correctly (with print side facing you) and selected the appropriate settings in the printer software. For help, see “Printing photos” on page 11 or “Printing transparencies” on page 34.
- Remove each page as it exits the printer, and then let it dry completely before stacking.

Transparencies or photos contain white lines

- Make sure you loaded the paper correctly (with print side facing you) and selected the appropriate settings in the printer software. For help, see “Printing transparencies” on page 34 or “Printing photos” on page 11.
- Select a higher print quality, such as **Better** or **Best**.
- Clean the print cartridge nozzles and contacts. For help, see “Improving print quality” on page 46.



Notices

Electronic emission notices

Federal Communications Commission (FCC) compliance information statement

The Lexmark Z600 Series Color Jetprinter, type 4126-001 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC Class B limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for any radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

Note: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1329605 for parallel attach or 12A2405 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lexmark Technology & Services
Lexmark International, Inc.
740 West New Circle Road
Lexington, KY 40550
(859) 232-3000

Industry Canada compliance statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis de conformité aux normes de l'industrie du Canada

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Community (EC) directives conformity

This product is in conformity with the protection requirements of EC Council directives 89/336/EEC and 73/23/EEC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility and safety of electrical equipment designed for use within certain voltage limits.

A declaration of conformity with the requirements of the directives has been signed by the Director of Manufacturing and Technical Support, Lexmark International, S.A., Boigny, France.


This product satisfies the Class B limits of EN 55022 and safety requirements of EN 60950.

Japanese VCCI notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

The United Kingdom Telecommunications Act 1984

This apparatus is approved under the approval number NS/G/1234/J/100003 for the indirect connections to the public telecommunications systems in the United Kingdom.

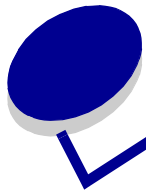

Glossary

alignment page. A page with printed alignment patterns that ejects from your printer during cartridge alignment.

alignment values. Numbers corresponding to patterns on the alignment page.

automatic alignment. A feature that automatically aligns the print cartridges.

Automatic Sheet Feeder (ASF). A mechanism that automatically feeds paper into your printer.

banner paper. Continuous sheets of perforated inkjet paper designed for banners. Also called continuous form paper.

booklets. Multiple pages printed, folded, and bundled to resemble a small book.

bundle. A group of booklet pages that are folded in half and stacked before binding.

cartridge contact. The gold area on your print cartridge that touches the carrier contacts inside your printer.

coated paper. Treated paper designed for high-quality printed images.

collate. A printer software option that lets you automatically print one complete copy of a multiple-page document before the next copy begins, and so on.

continuous form paper. See banner paper.

custom size paper. A nonstandard paper size.

default printer. The printer automatically used when you send jobs to print.

default printer settings. Printer software settings defined when the printer is manufactured.

driver. See printer software.

duplex. A printer software option that lets you print on both sides of a sheet of paper.

glossy paper. Paper with one glossy side designed for photographs.

handouts. Multiple-page images printed on a single sheet of paper. See **N-up**.

label. Self-adhesive paper.

landscape orientation. Page orientation in which text runs parallel with the long edge of the paper.

line art. A printer software option used for printing simple line art and graphics.

long-edge binding. A printer software option that arranges duplexed pages so they can be bound along the long side of the pages.

manual alignment. A printer software feature that lets you select print cartridge alignment values.

margins. The blank area between printed text or graphics and the edges of a page.

mirror. A printer software option that lets you reverse an image before printing.

N-up. A printer software option that lets you print multiple pages of a document on a single sheet of paper. For example, select 4-up to print reduced images of pages 1 through 4 on the first sheet of paper, images of pages 5 through 8 on the second sheet, and so on.

natural color. A printer software option used for printing photographs and highly detailed graphic images.

operating system. The software that provides the basic functions needed for operating your computer. For example, Windows 98 or Macintosh OS X.

peer-to-peer network. A local area network (LAN) in which all computers have access to the public files located on other computers.

peripheral device. Any external device connected to and controlled by a computer.

photo paper. Treated paper designed for photographs.

plain paper. Paper designed for printing text documents.

portrait orientation. Page orientation in which text runs parallel with the short edge of the paper.

poster. An image printed on multiple sheets of paper that, when assembled, produce an enlarged version of the original image.

premium paper. Coated paper designed for reports or documents with graphics.

print cartridge. The replaceable unit inside your printer that contains the ink.

print cartridge nozzles. The gold area of the print cartridge that ink flows through before it is applied to your paper during printing.

print queue. The location on the server where print jobs are stored for printing in the order in which they are sent.

printer driver. See printer software.

printer port. See USB port.

printer software. (1) The program that lets you select settings to customize your print job. (2) The program that lets your computer communicate with your printer.

program. Any software loaded on your computer that lets you perform a specific task, such as word processing or photo editing.

reverse order printing. A printer software option that lets you print the last page of your document first so your pages are in sequential order on the exit tray.

sharpen. A printer software option that reduces the blurriness of a printed image.

short-edge binding. A printer software option that arranges duplexed pages so they can be bound along the short side of the pages.

side flip. A printer software option that arranges duplexed pages so they turn like the pages of a magazine.

software program. See program.

top flip. A printer software option that arranges duplexed pages so they turn like the pages of a legal pad.


transparency. A see-through sheet of print media that can be displayed on an overhead projector.

USB cable. A lightweight, flexible cable that lets your printer communicate with your computer. USB cables transmit data at much higher speeds than parallel cables.

USB port. A small, rectangular port on the back of your computer that connects to peripheral devices, such as a printer, using a USB cable. The USB port lets your computer communicate with your printer at high speeds.

watermark. A light graphic or background text that appears on each page of a document.

Web Tune-Up. A feature that lets you periodically download updated printer software already installed on your computer.

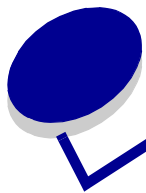

Index

A

aligning print cartridges 45

B

banding 58
banner paper 38
booklet
 building 24

C

cable, part numbers
 USB 48
cards 17
cartridges, print
 aligning 45
 installing 43
 ordering 48
 part numbers 42
 preserving 47
 removing 42
 replacing 42
cartridges, troubleshooting 49
characters, misformed 59
coated paper 11
conserving color ink 20
custom size paper 40
customizing settings
 banner paper 38
 booklet 22
 both sides of the paper 14
 cards 17
 coated paper 11
 custom size paper 40
 driver 7
 duplexing 14
 envelopes 18
 glossy paper 11
 greeting cards 17

handouts

 See multiple images on
 one sheet
index cards 17
iron-on transfers 32
labels 25
last page first 36
multiple images on one
 sheet 28
photo cards 17
photo paper 11
plain paper 10
postcards 17
poster 29
premium paper 13
printing color images in black
 and white 20
printing in reverse order 36
printing multiple images on
 one sheet 28
transparencies 34
t-shirt transfers 32
two-sided printing 14

D

dark or smudged print 58
default settings 6
downloaded printer driver,
 installing 52
duplexing 14

E

electronic emission notices 61
emission statement 61
envelopes 18
error messages
 Ink Low 53
 Paper Jam 53

F

FCC statement 61
flashing lights 53

G

glossy paper 11
greeting cards 17

H

handouts 27

I

improving print quality 58
index cards 17
Ink Low message 53
installing
 print cartridges 43
 printer software 52
intermittent printing 58
iron-on transfers 32

L

labels 25
Lexmark Solution Center 8
loading
 banner paper 38
 booklet 22
 cards 17
 coated paper 11
 custom size paper 40
 duplexing 14
 envelopes 18
 glossy paper 11
 greeting cards 17
 handouts 27
 index cards 17
 iron-on transfers 32

- labels 25
- photo cards 17
- photo paper 11
- postcards 17
- poster 29
- premium paper 13
- print on both sides of the paper 14
- transparencies 34
- t-shirt transfers 32
- two-sided printing 14

M

- margins, minimum settings 59
- messages, error
 - Ink Low 53
 - Paper Jam 53
- multiple images on one sheet 28

N

- N-up 28

O

- ordering supplies 48

P

- Paper Jam message 53
- paper jam, clearing 57
- paper misfeeds 56
- Paper Setup tab 8
- part numbers
 - black cartridge 48
 - color cartridge 48
 - USB cable 48
- photo cards 17
- photo paper 11
- postcards 17
- poster 29
- premium paper 13
- print cartridge
 - aligning 45
 - installing 43
 - ordering 48
 - part numbers 42
 - preserving 47
 - replacing 42

- print color images in black and white 20
- print in reverse order 36
- print last page first 36
- Print Layout tab 8
- print on both sides of the paper 14
- print quality
 - improving 46
- printer cable,
 - troubleshooting 49
- printer driver
 - installing 52
 - removing 52
- printer parts 6
- printer software
 - driver 6
 - installing 52
 - Lexmark Solution Center 6
 - removing 52
 - uninstalling (Windows) 55
- printer software CD,
 - troubleshooting 50
- printing
 - alignment page 45
 - banner paper 38
 - booklet 22
 - cards 17
 - coated paper 11
 - color images in black and white 20
 - custom size paper 40
 - duplexing 14
 - envelopes 18
 - glossy paper 11
 - greeting cards 17
 - handouts
 - See multiple images on one sheet
 - index cards 17
 - iron-on transfers 32
 - labels 25
 - last page first 36
 - N-up
 - See multiple images on one sheet
 - photo cards 17
 - photo paper 11

- plain paper 10
- postcards 17
- poster 29
- premium paper 13
- print on both sides of the paper 14
- reverse order 36
- test page 50
- transparencies 34
- t-shirt transfers 32
- two-sided printing 14
- printing problems
 - blank pages 56
 - error messages 53
 - flashing lights 53
 - paper feeding 56
 - paper jams 57
 - print quality 58
 - software 50
 - specialty paper 60
 - unsuccessful or slow printing 54

Q

- Quality/Copies tab 7

R

- removing print cartridges 42
- removing printer software 52
- replacing the print cartridge 42

S

- setting recommendations
 - banner paper 38
 - booklet 22
 - both sides of the paper 14
 - cards 17
 - coated paper 11
 - color images in black and white 20
 - custom size paper 40
 - default 6
 - duplexing 14
 - envelopes 18
 - glossy paper 11
 - greeting cards 17
 - handouts 27

- index cards 17
- iron-on transfers 32
- labels 25
- last page first 36
- photo cards 17
- photo paper 11
- plain paper 10
- postcards 17
- poster 29
- premium paper 13
- print color images in black and white 20
- print last page first 36
- print on both sides of the paper 14
- transparencies 34
- t-shirt transfers 32
- two-sided printing 14
- settings, default 6
- slow printing 56
- software, printer 6
 - installing 52
 - removing 52
- specialty paper
 - solving problems with 60
- supplies, ordering 48

T

- test page
 - alignment 45
 - does not print 55
- test page, printing 50
- transfers, iron-on 32
- transparencies 34
- troubleshooting
 - alignment page 56
 - blank pages 56
 - cartridges 49
 - error messages 53
 - flashing lights 53
 - improving print quality 58
 - margins 59
 - paper feeding 56
 - paper jams 57
 - paper misfeeds 56
 - print quality 58
 - printer cable 49
 - printer not printing 54

- printer software
 - installation 50
- slow printing 56
- software 50
- solving print quality problems 58
- specialty paper 60
- test page 50
- uninstalling software (Windows) 55
- unsuccessful or slow printing 54
- t-shirt transfers 32
- two-sided printing 14

U

- USB cable
 - ordering 48



Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Color Jetprinter is a trademark of Lexmark International, Inc.

© 2003 Lexmark International, Inc.

740 West New Circle Road

Lexington, Kentucky 40550